





www.weka-holzbau.com

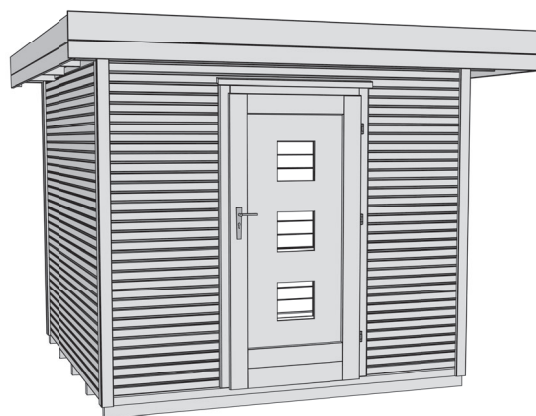

MASSIVHOLZ - HAUS

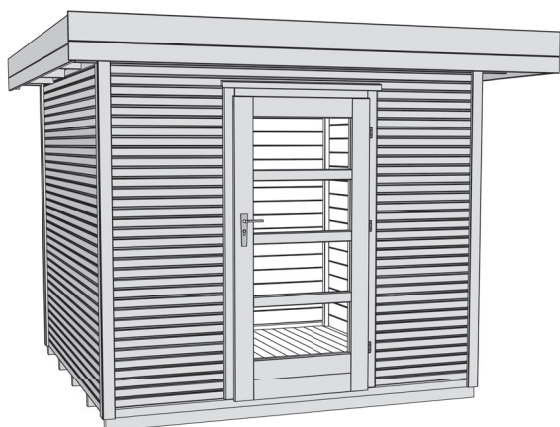

172.2121.70001 / 76001

172.2424.70001 / 76001

172.3030.70001 / 76001

172.2121.70021 / 76021

172.2424.70021 / 76021

172.3030.70021 / 76021

Montage-, Bedienungs- und Wartungsanleitung




800.0286.17.48








+














800.0286.20.02








=

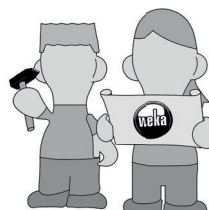


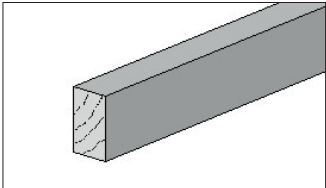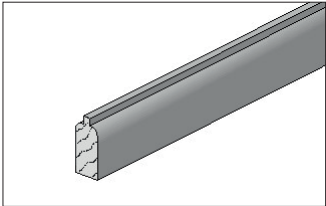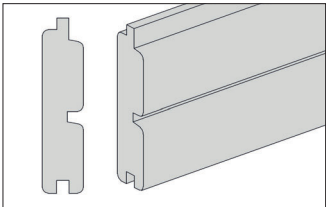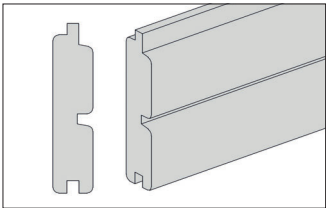
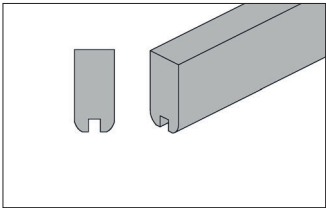
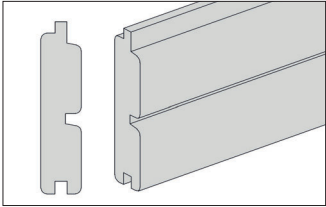
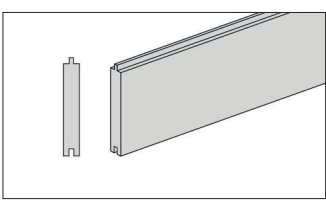
Pos	Bild	Abmessung (mm)	Anzahl (Stück)		
			172.2121	172.2424	172.3030
①		50/70/2050	5	-	-
		50/70/2350	-	5	-
		50/70/2950	-	-	6
②		28/63/2050	2	-	-
		28/63/2350	-	2	-
		28/63/2950	-	-	2
③		28/121/555	32	-	-
		28/121/705	-	32	-
		28/121/1005	-	-	32
④		28/121/2455	2	-	-
		28/121/2760	-	2	-
		28/121/3360	-	-	2
⑤		28/58/2455	1	-	-
		28/58/2760	-	1	-
		28/58/3360	-	-	1
⑥		28/121/2050	52	-	-
		28/121/2350	-	52	-
		28/121/2950	-	-	52
⑦		15,5/96/2050	23	-	-
		15,5/96/2350	-	26	-
		15,5/96/2950	-	-	33

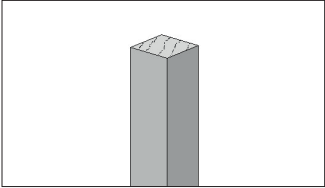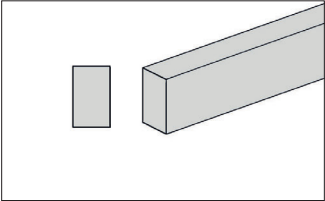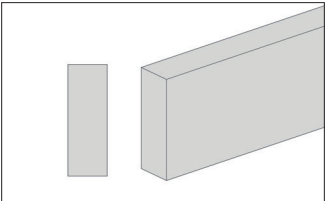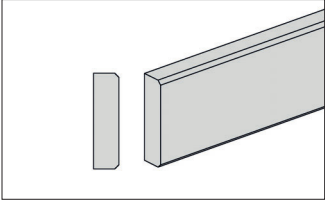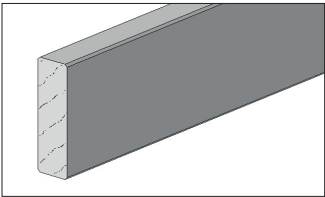Pos	Bild	Abmessung (mm)	Anzahl (Stück)		
			172.2121	172.2424	172.3030
8		40/40/2128	4	4	4
9		15/25/2000	6	7	8
10		28/226/2050	1	-	-
		28/226/2350	-	1	-
		28/226/2950	-	-	1
11		28/226/2050	1	-	-
		28/226/2350	-	1	-
		28/226/2950	-	-	1
12		15/28/1805	2	2	2
13		18,5/70/2153	8	8	8
14		45/146/2455	2	-	-
		45/146/2760	-	3	-
		45/146/3360	-	-	3

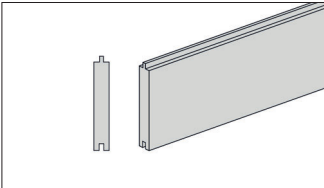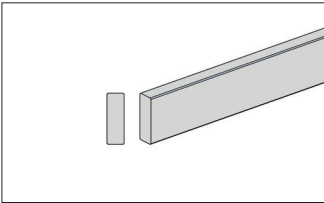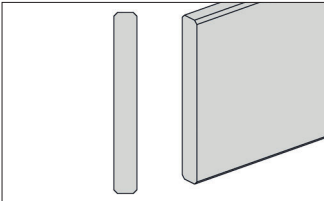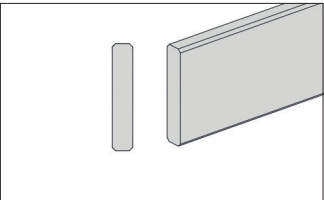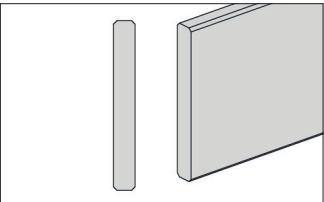Pos	Bild	Abmessung (mm)	Anzahl (Stück)		
			172.2121	172.2424	172.3030
15		15,5/96/2770	28	-	-
		15,5/96/3080	-	31	-
		15,5/96/3710	-	-	38
16		15/45/2300	4	5	9
-	-	-	-	-	-
18		28/28/150	18	18	18
19		18,5/146/2840	1	1	-
		18,5/146/3560	-	-	1
20		18,5/96/2840	1	1	-
		18,5/96/3560	-	-	1
21		18,5/146/2840	2	-	-
		18,5/146/3140	-	2	-
		18,5/146/3750	-	-	2

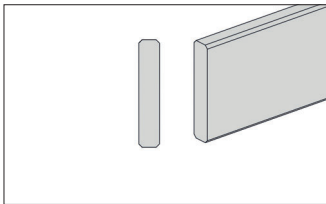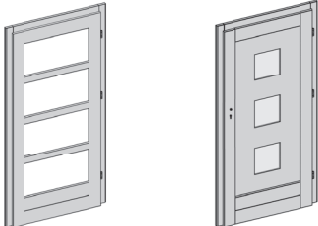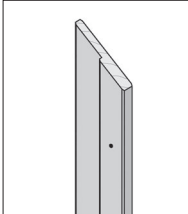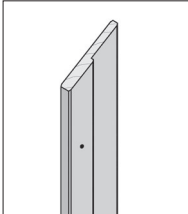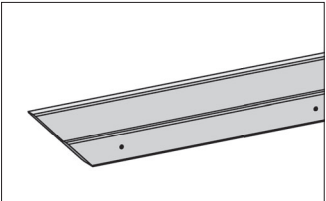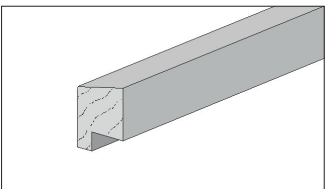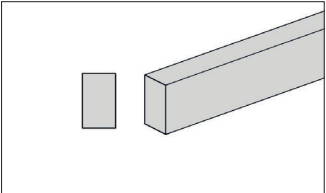
Pos	Bild	Abmessung (mm)	Anzahl (Stück)		
			172.2121	172.2424	172.3030
(22)		18,5/96/2840	2	-	-
		18,5/96/3140	-	2	-
		18,5/96/3750	-	-	2
(23)		970 x 1810	1	1	1
(24)		18,5/70/1815	1	1	1
(25)		18,5/70/1815	1	1	1
(26)		18,5/70/965	1	1	1
(27)		35/45/990	1	1	1
(28)		15/25/990	1	1	1

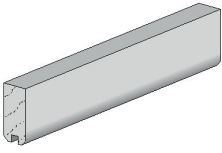Pos	Bild	Abmessung (mm)	Anzahl (Stück)		
			172.2121	172.2424	172.3030
(29)		28/60/300	4	4	4


Pos	Bild	Abmessung (mm)	Anzahl (Stück)
(M1)	K001.1250.0004 	5,0 x 120	6
(M2)	K001.8050.0004 	5,0 x 80	20
(M3)	K001.6040.0004 	4,0 x 60	380
(M4)	K001.4040.0004 	4,0 x 40	120
(M5)	K001.3535.0004 	3,5 x 35	60
(M6)	K001.3030.0001 	3,0 x 30	80
(M7)	K010.5022.0001 	2,2 x 55	800
-	-	-	-
(M9)	K045.1270.0001 K036.3135.0001 		1

Art.-Nr.: 172.2121


FW

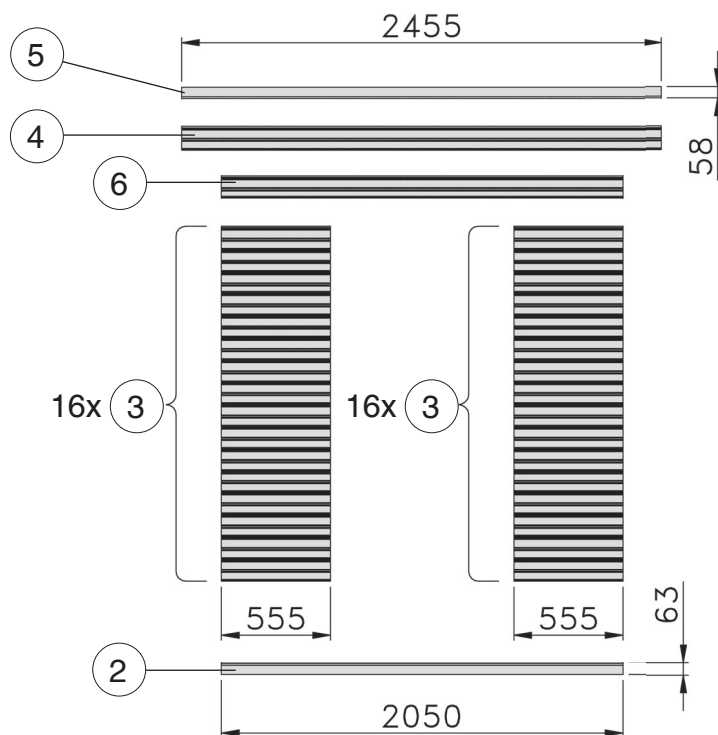

SW

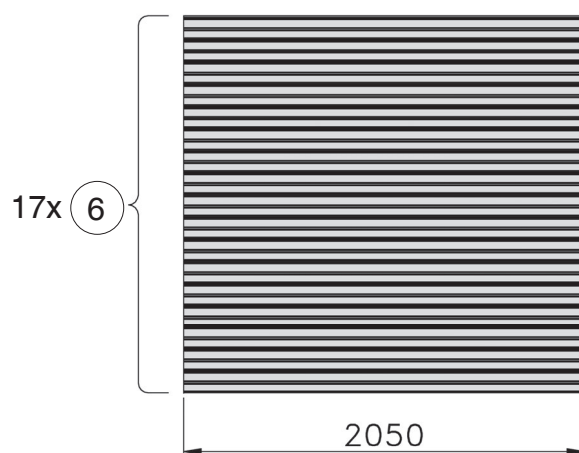


RW

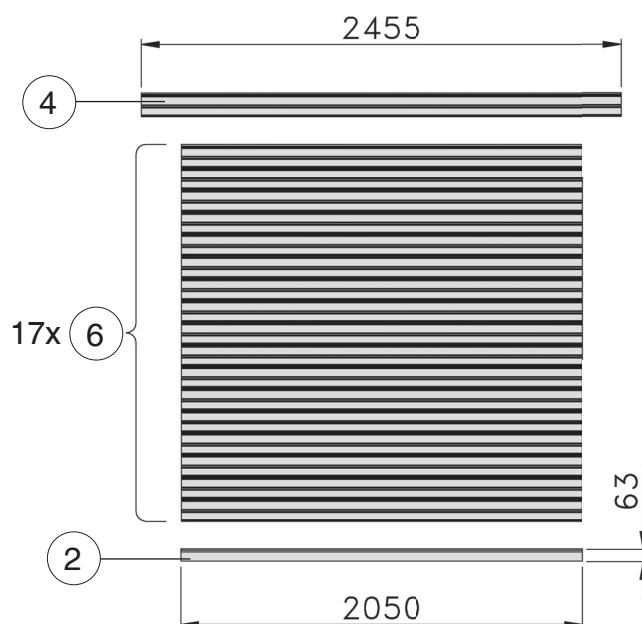


Angaben in mm

Art.-Nr.: 172.2424


FW

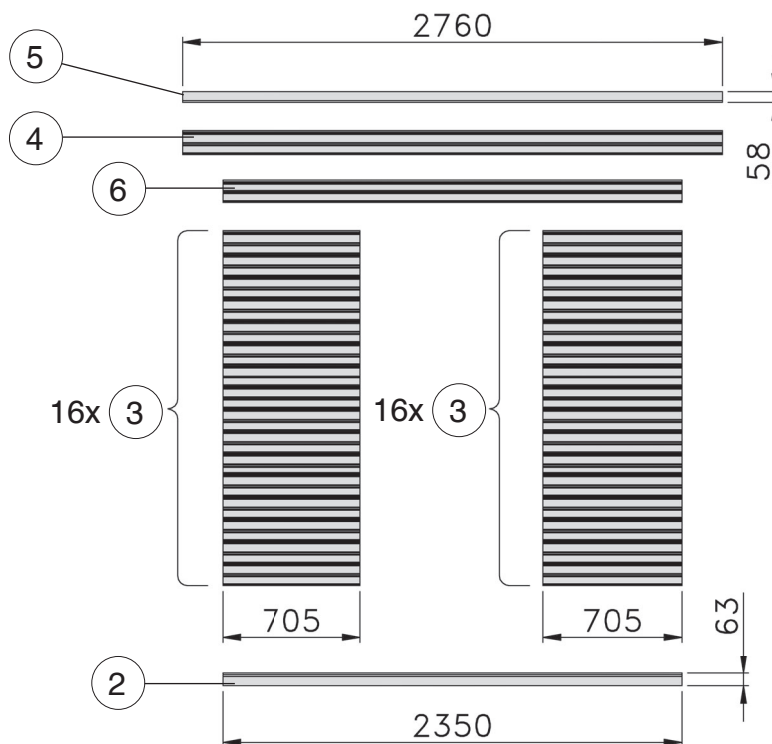

SW

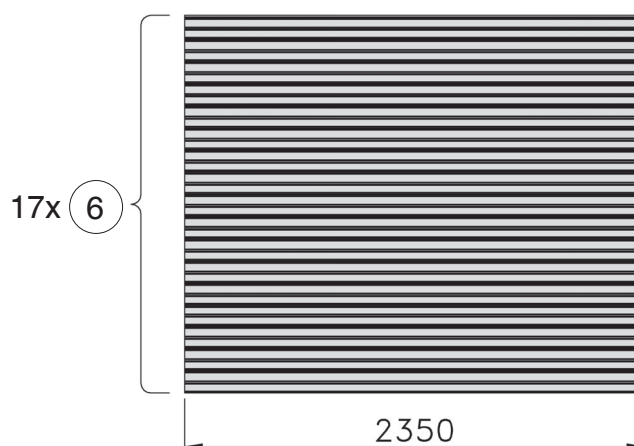


RW

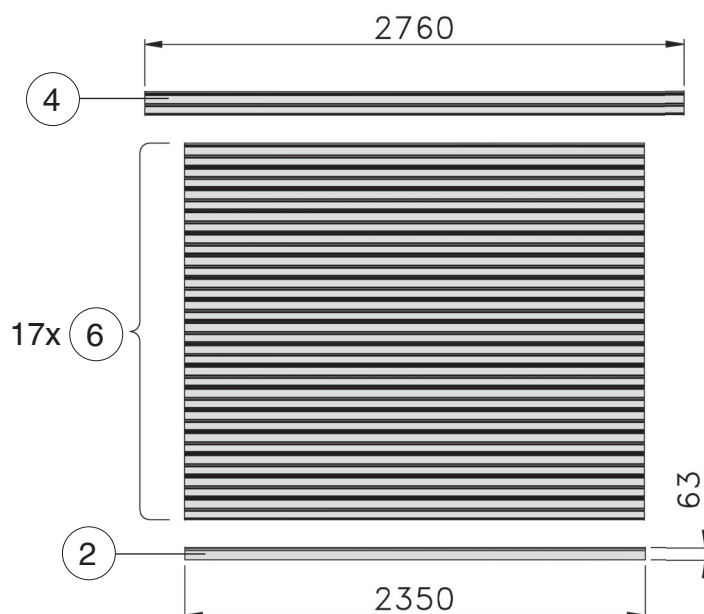


Angaben in mm

Art.-Nr.: 172.3030


FW

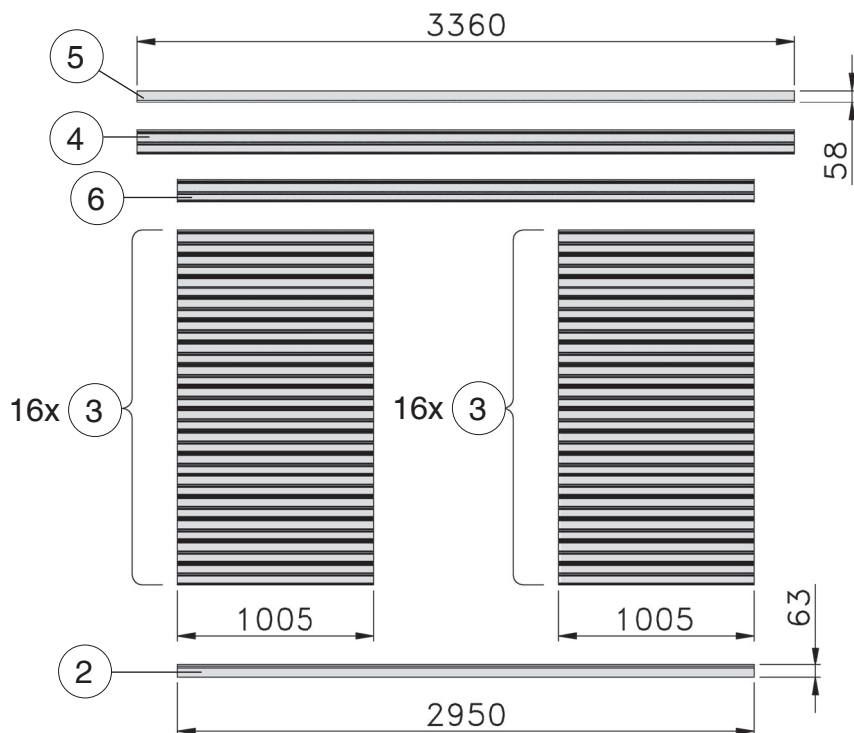

SW

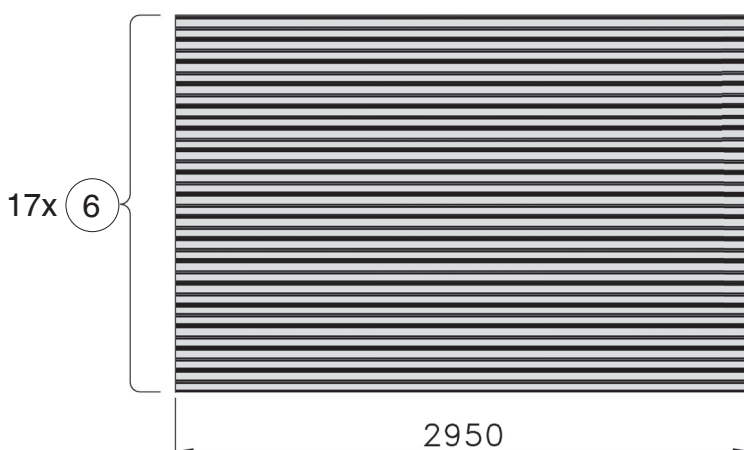

RW

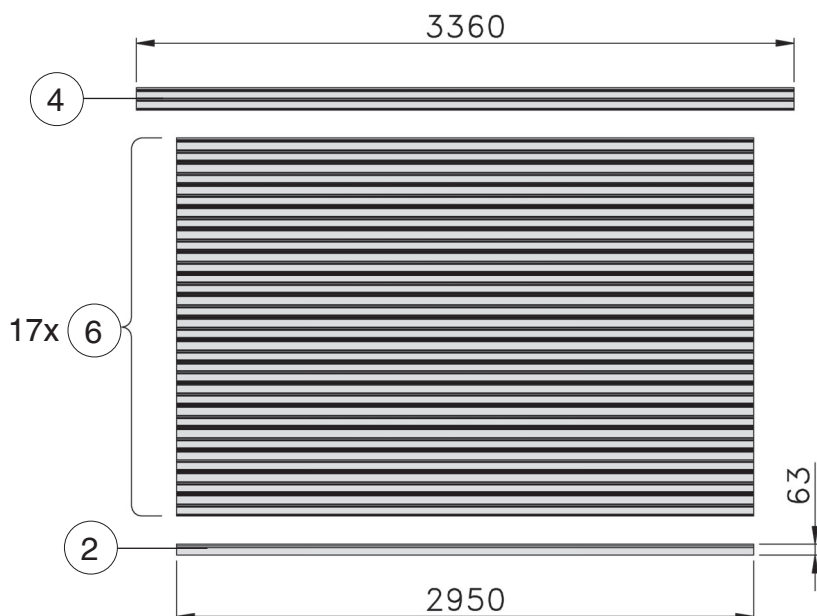


Angaben in mm


1.



2.

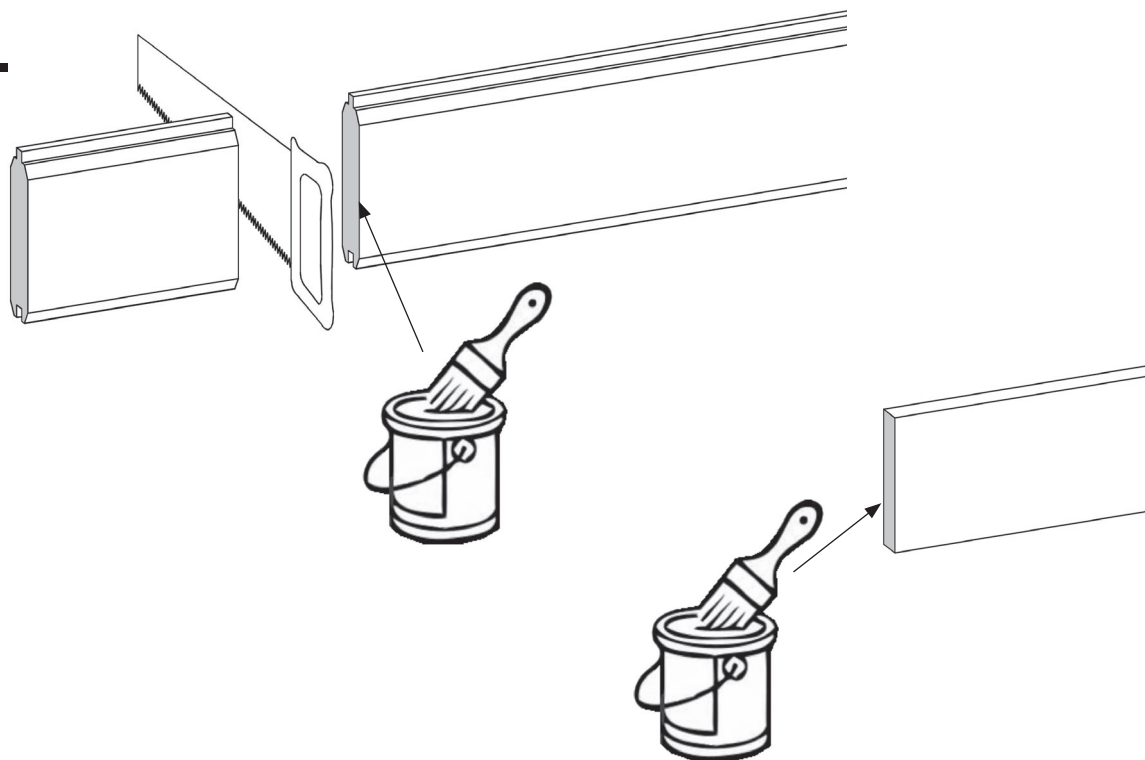


3.

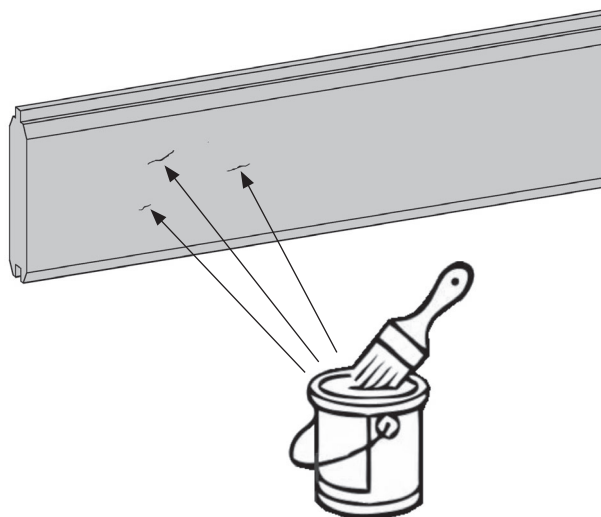


1


Art.-Nr.: 172.2121

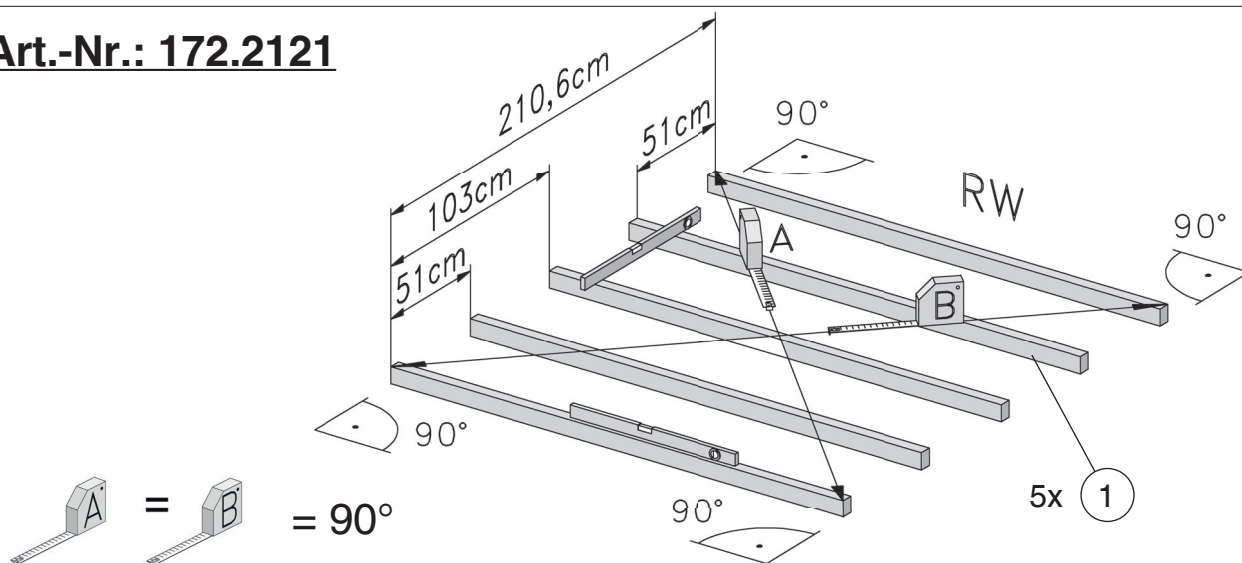

Art.-Nr.: 172.2424

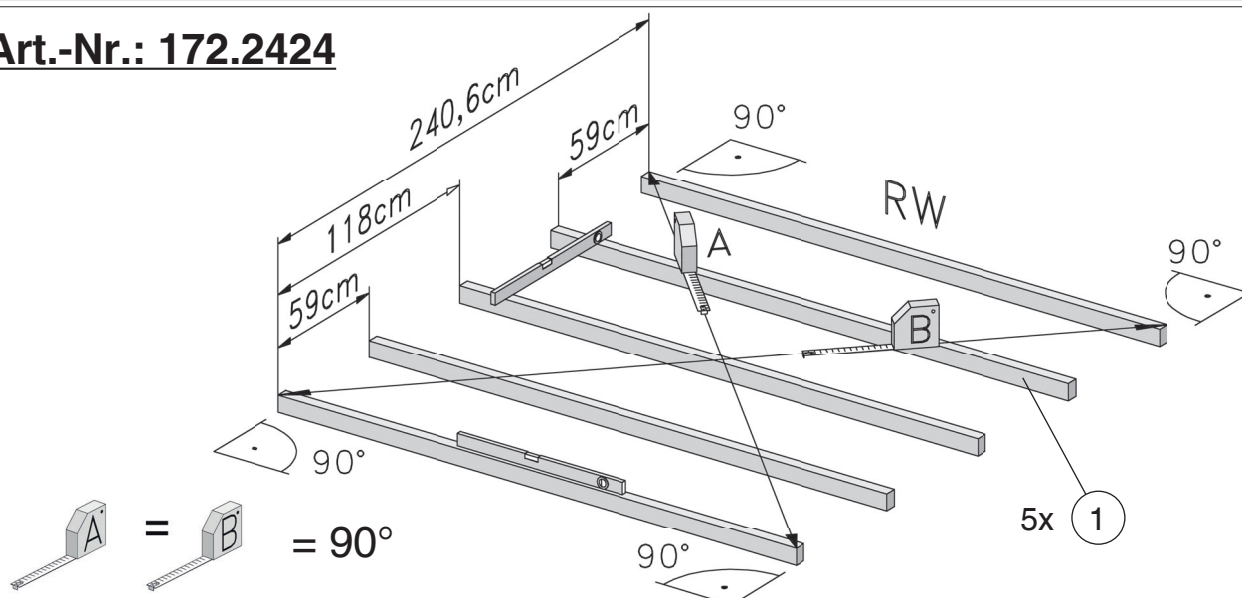

Art.-Nr.: 172.3030

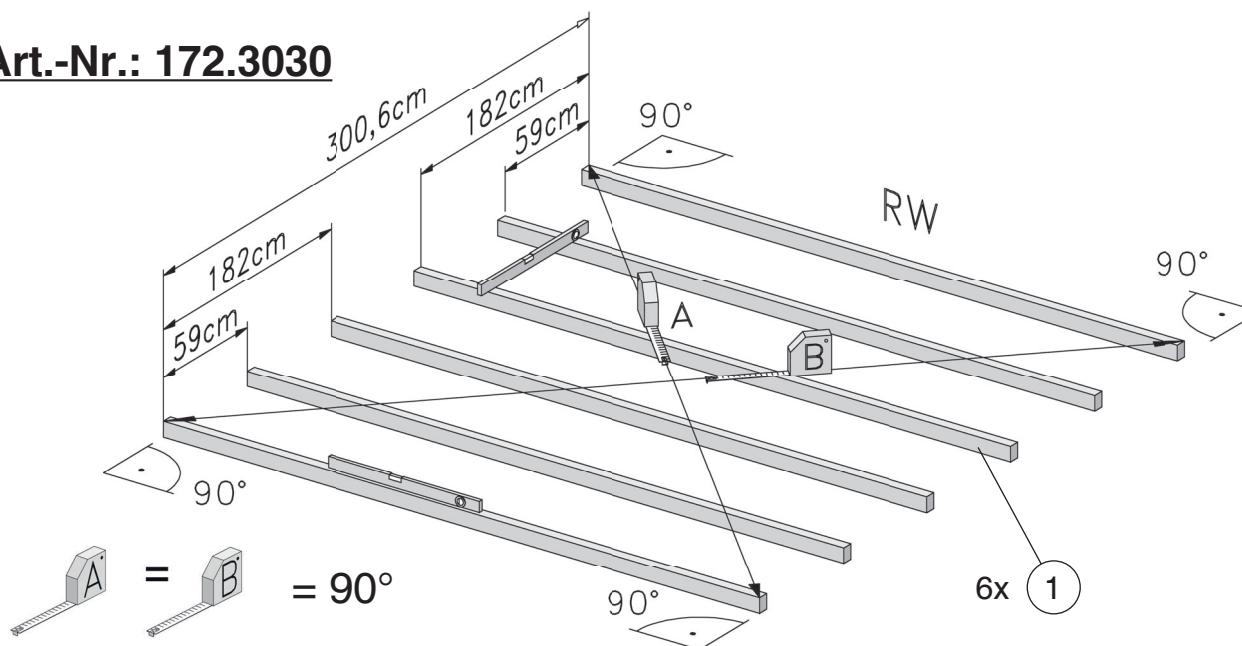

2

	M1	5,0 x 120
	M3	4,0 x 60

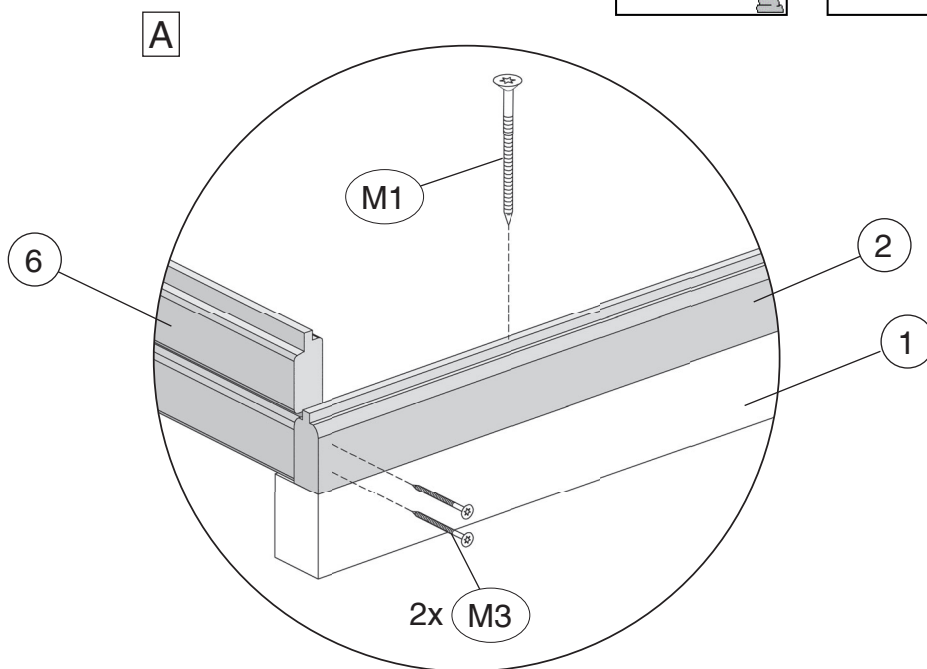

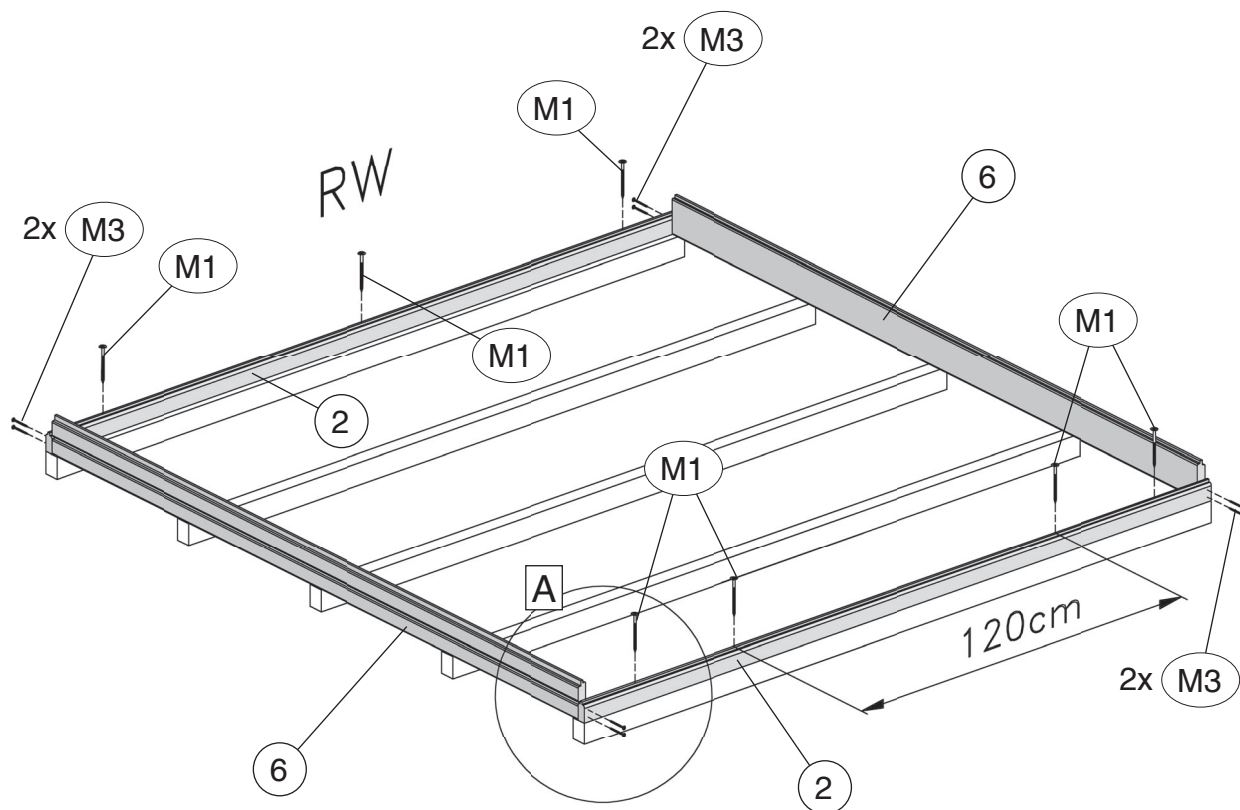


Abb.: 172.2424

	M7 2,2 x 55



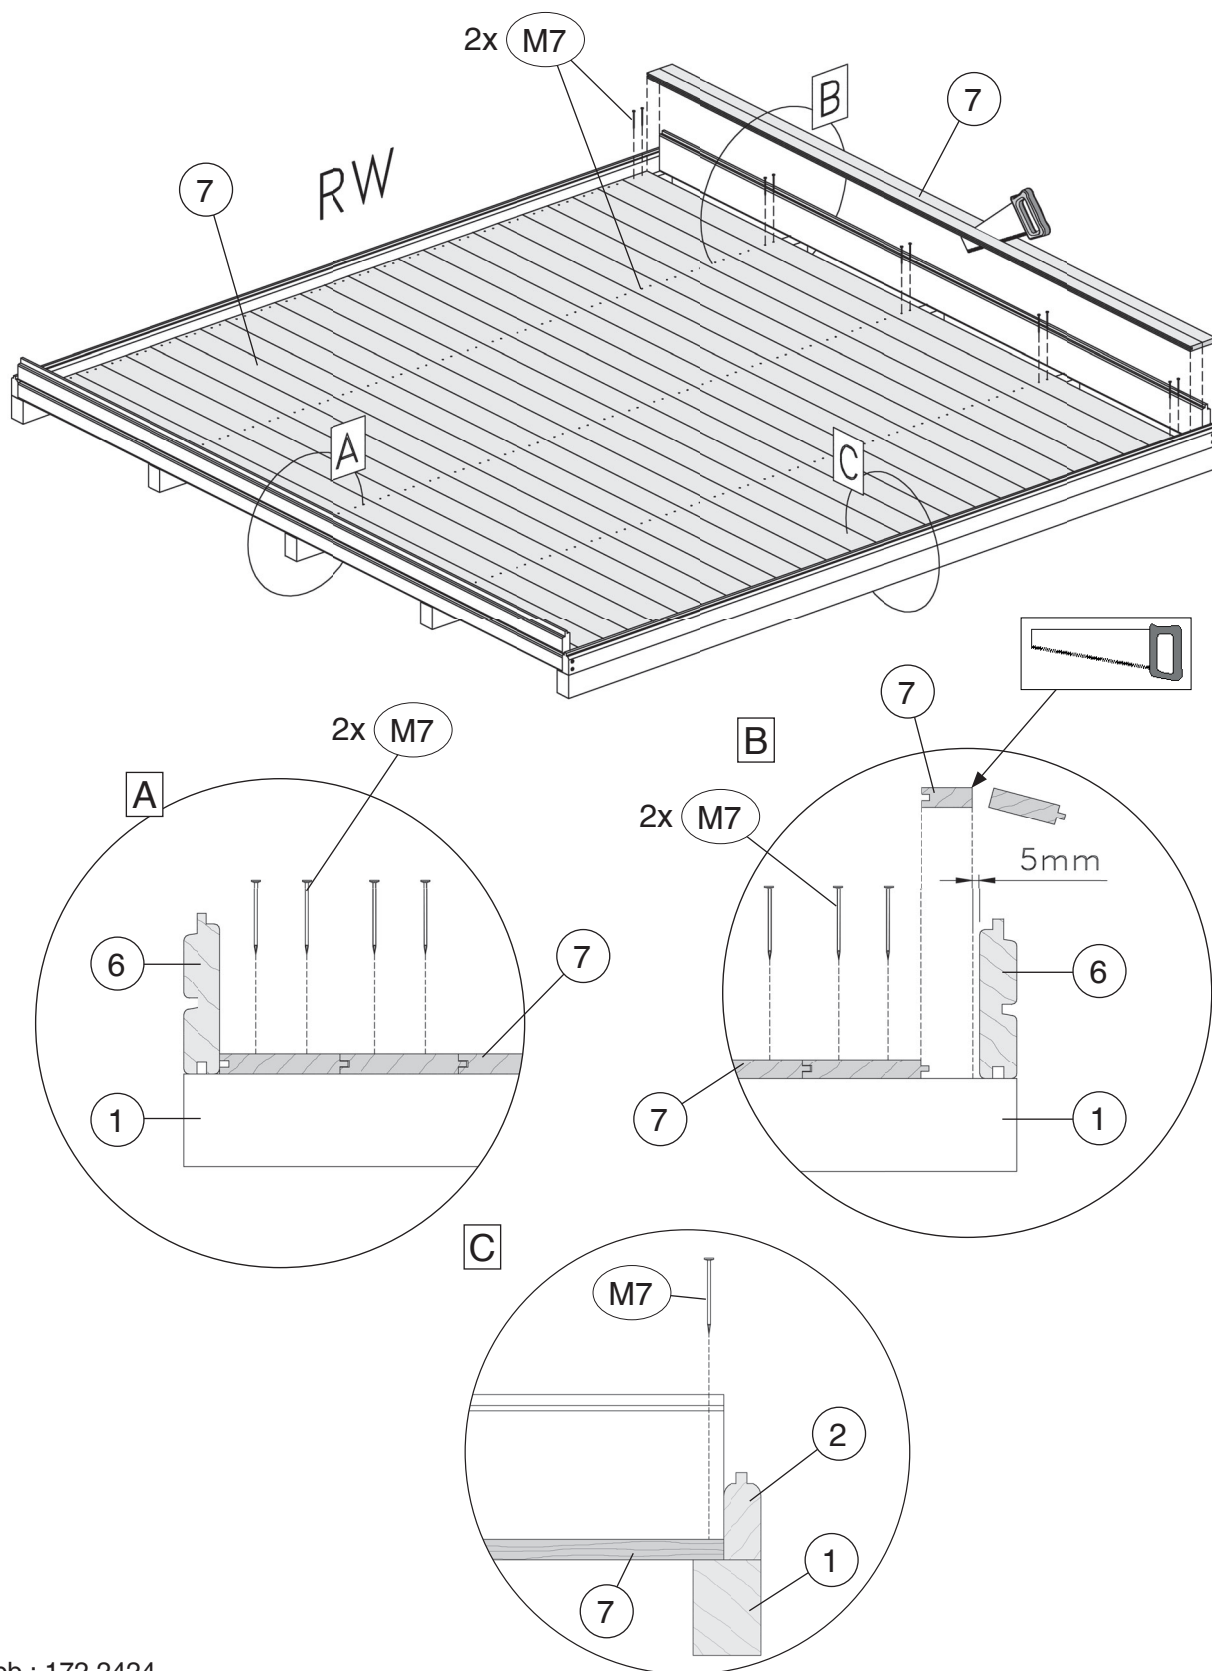


Abb.: 172.2424

4

	M2	5,0 x 80		M7	2,2 x 55
	M3	4,0 x 60			

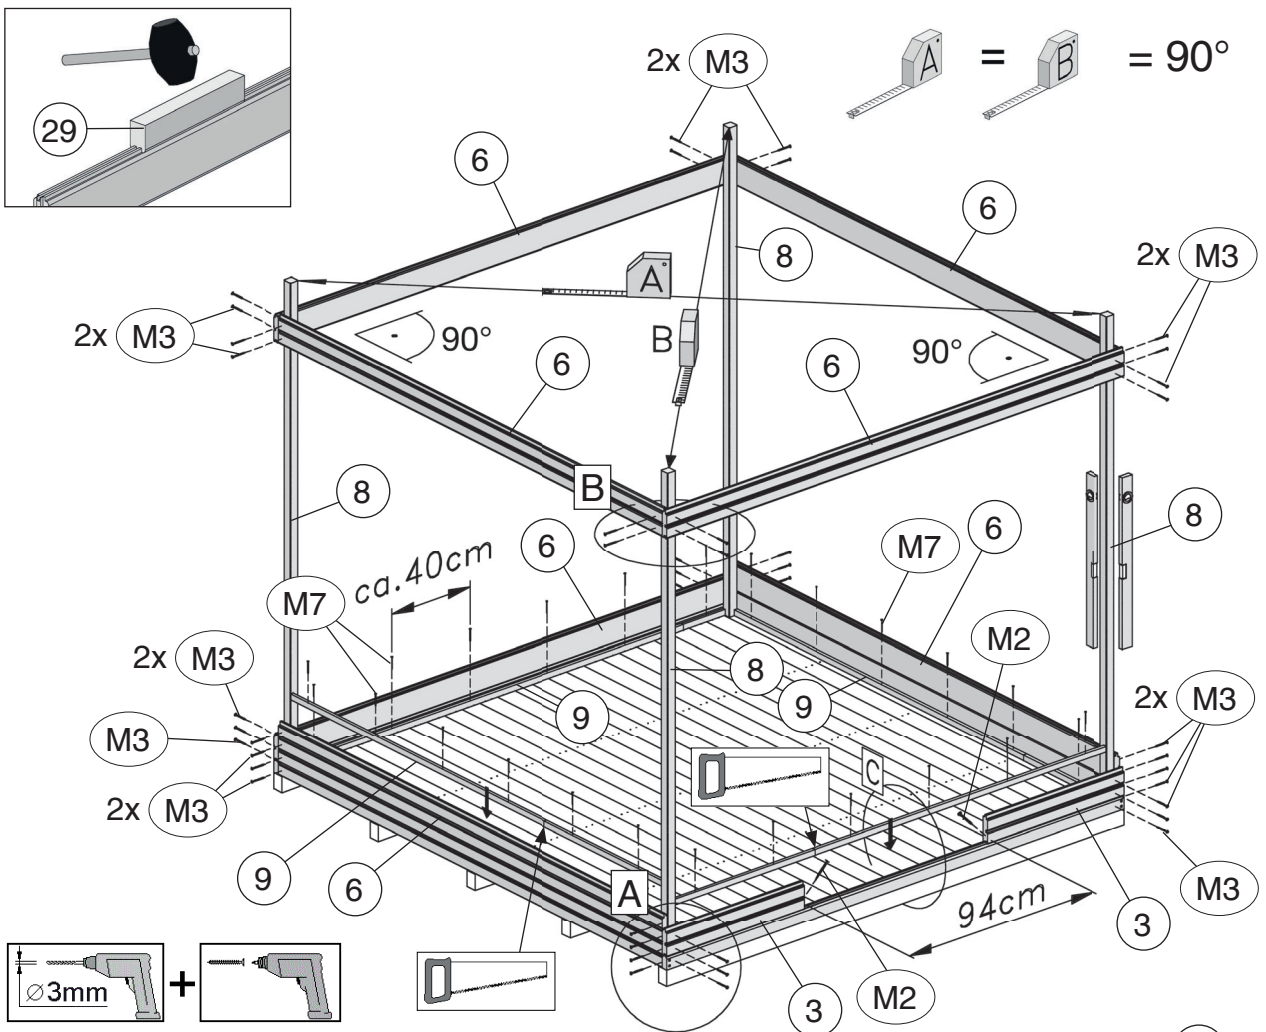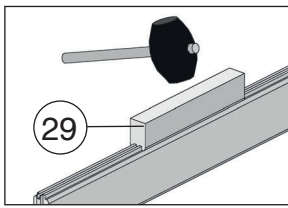

Die oberen Wandbohlen werden nur vorübergehend als Montagehilfe befestigt (Abb.4), später wieder abgenommen und an anderer Stelle montiert. (Abb.5)







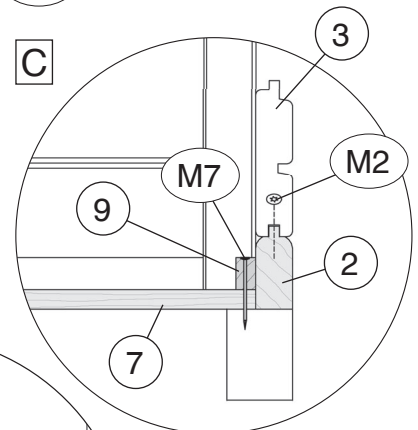


Abb.: 172.2424

5.1

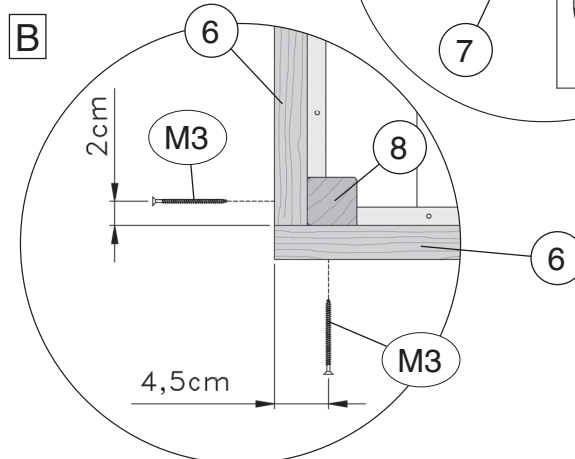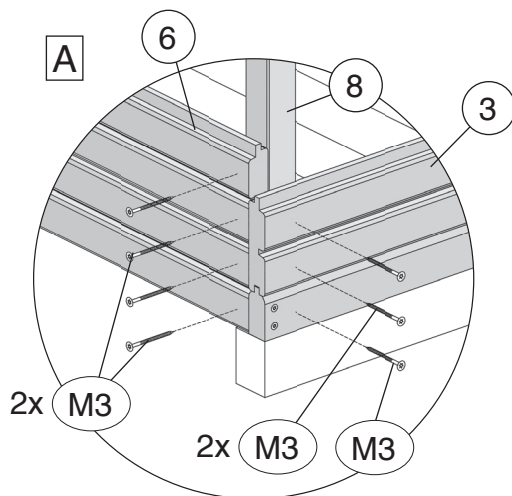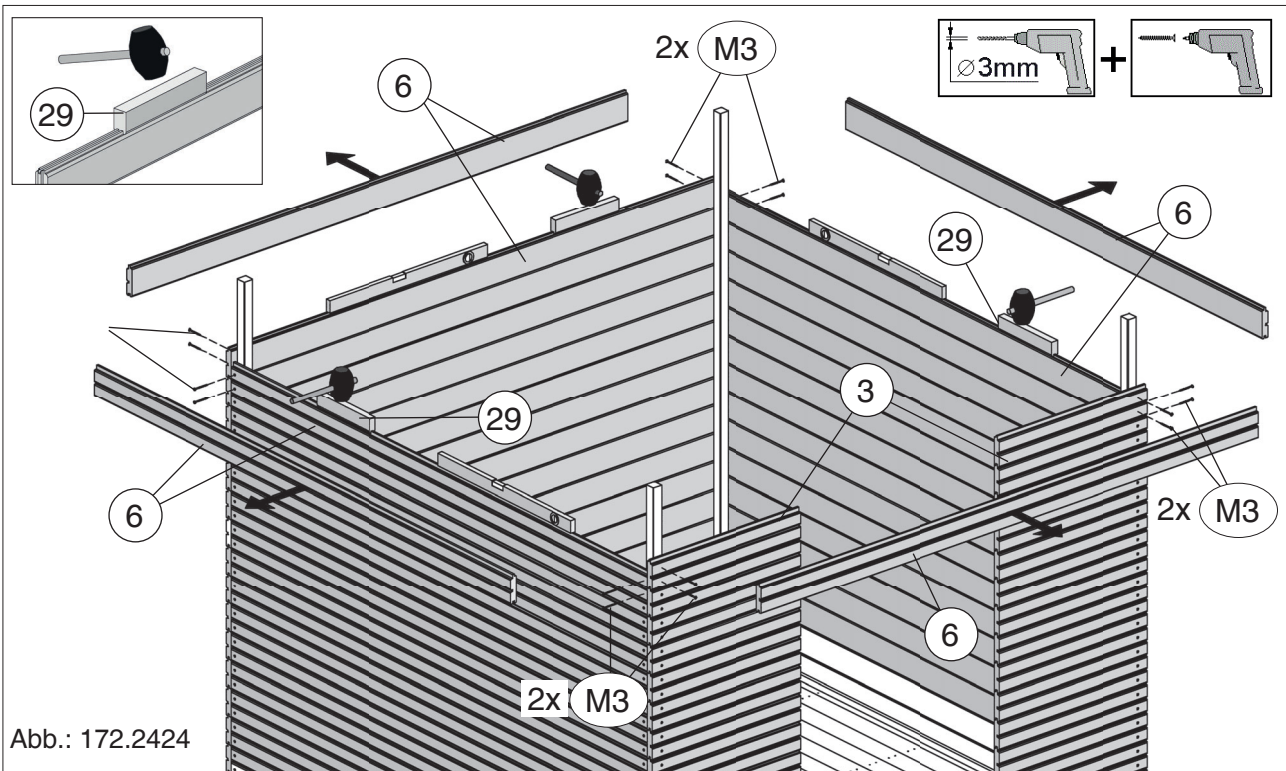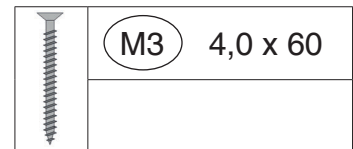
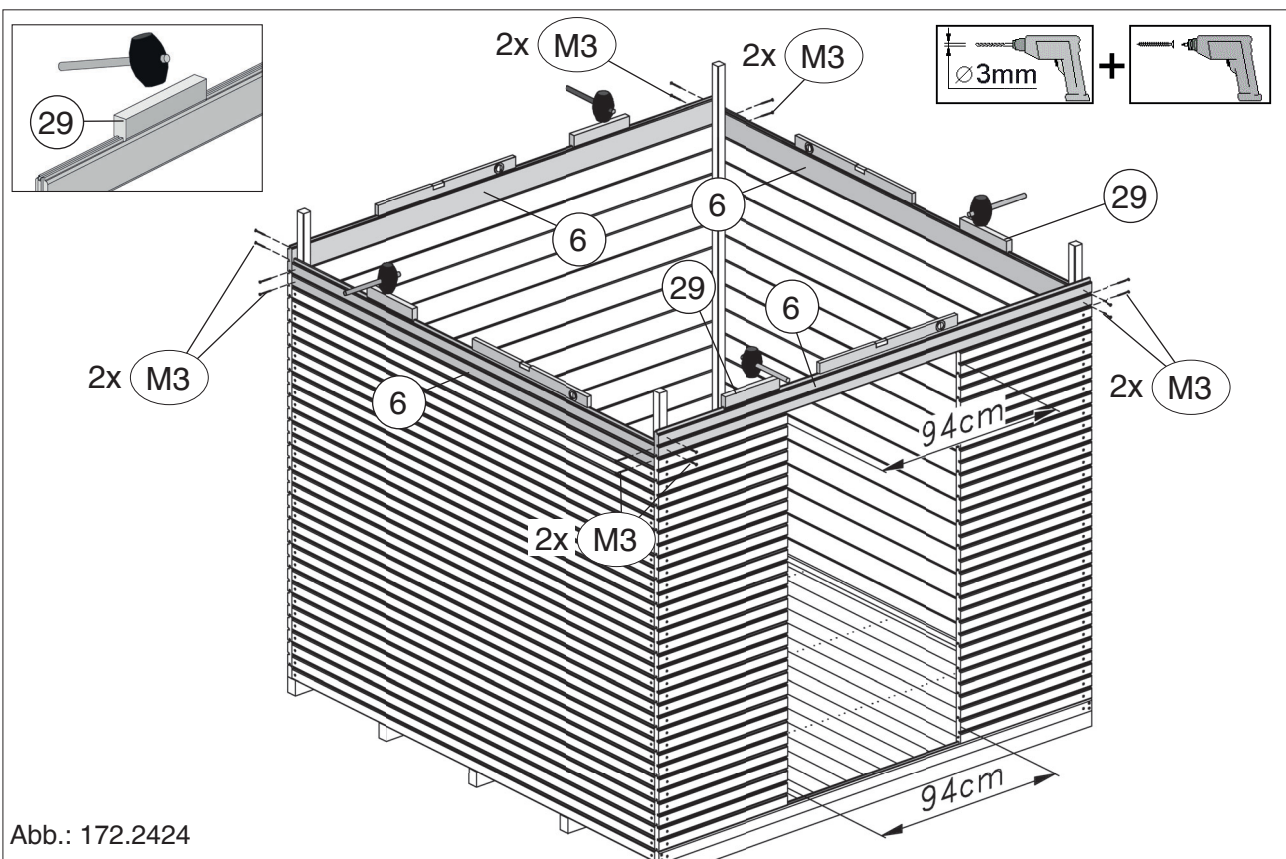


5.2

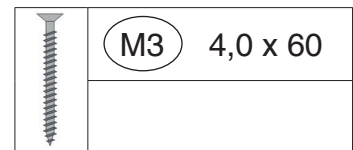

6

Art.-Nr.: 172.2121

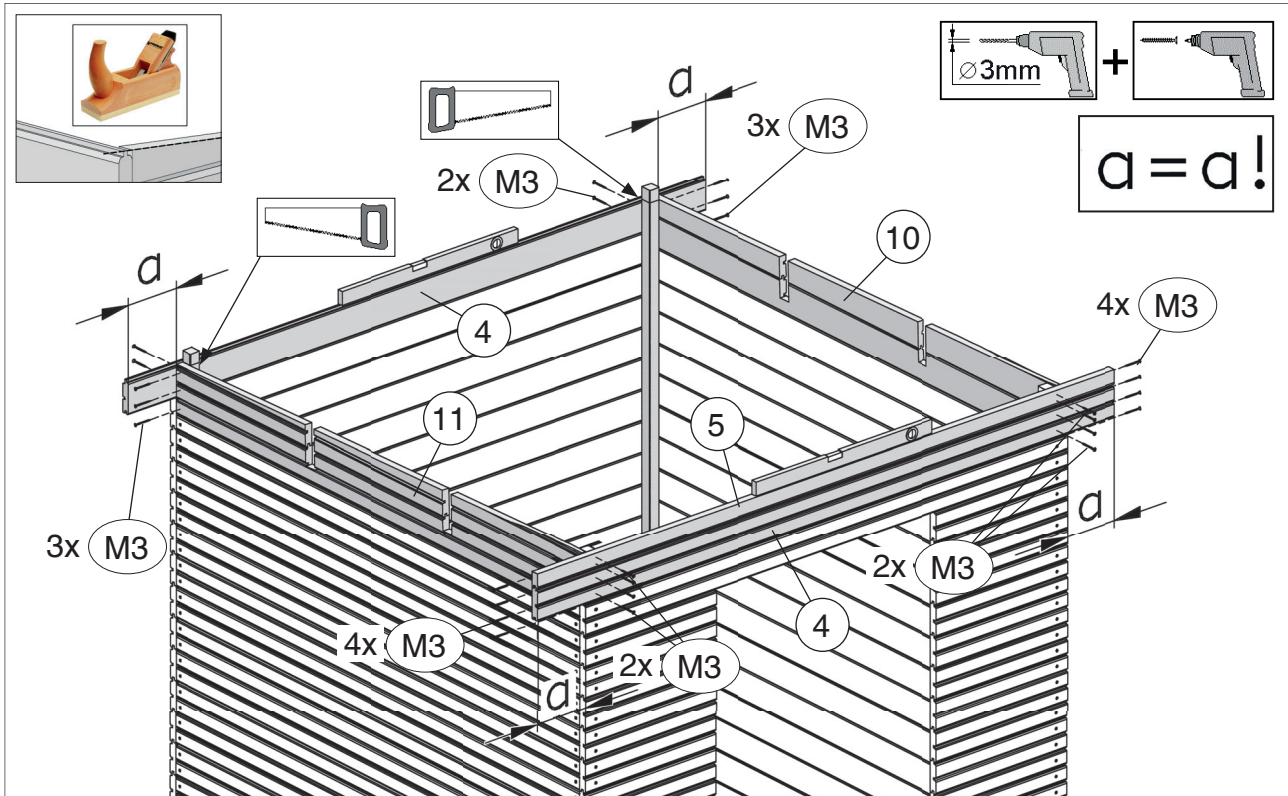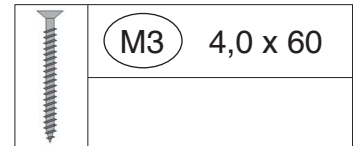

6

Art.-Nr.: 172.2424

Art.-Nr.: 172.3030

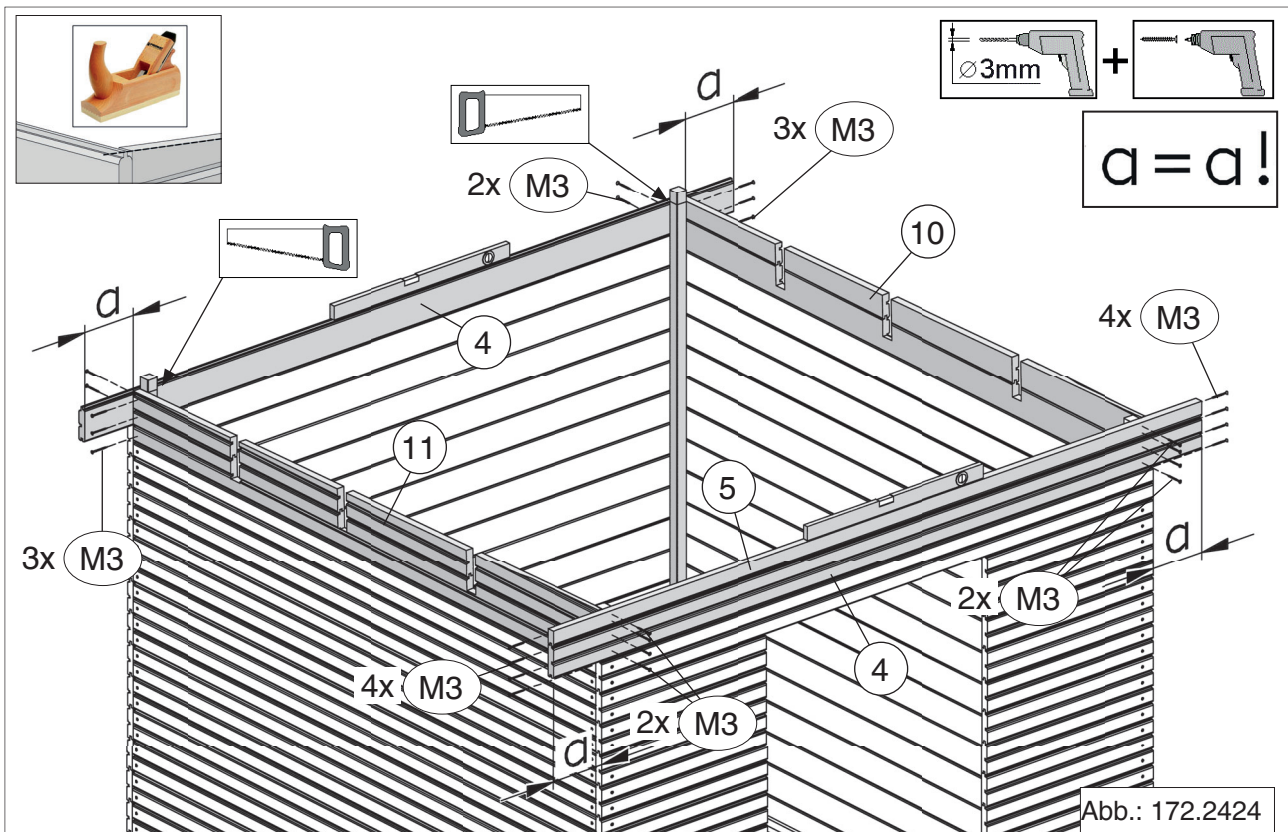
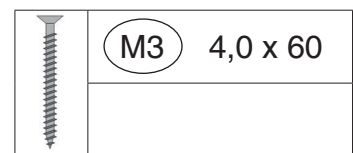
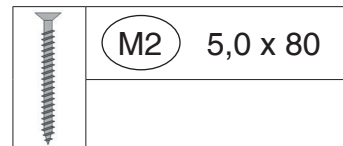
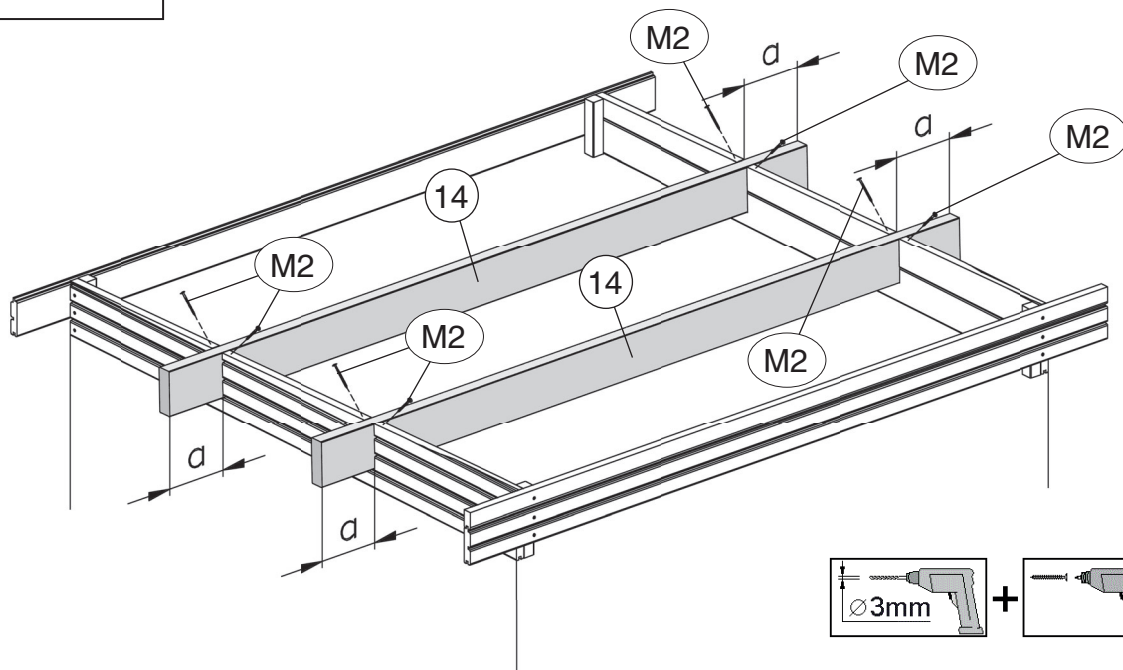


Abb.: 172.2424

7

Art.-Nr.: 172.2121 $a=a!$ 

7



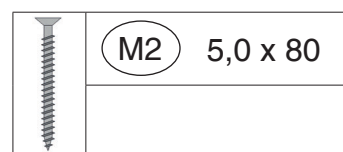
Art.-Nr.: 172.2424
Art.-Nr.: 172.3030
 $a=a!$ 





Abb.: 172.2424





	M5 3,5 x 35
---	-------------

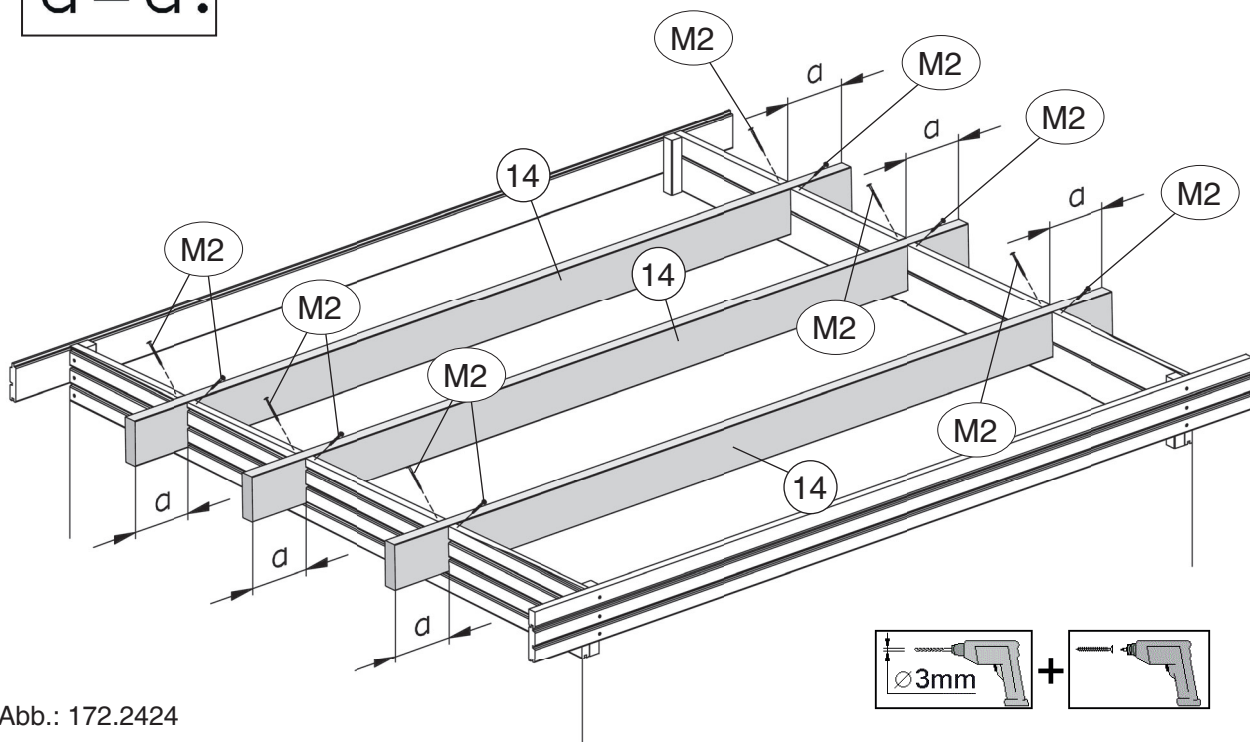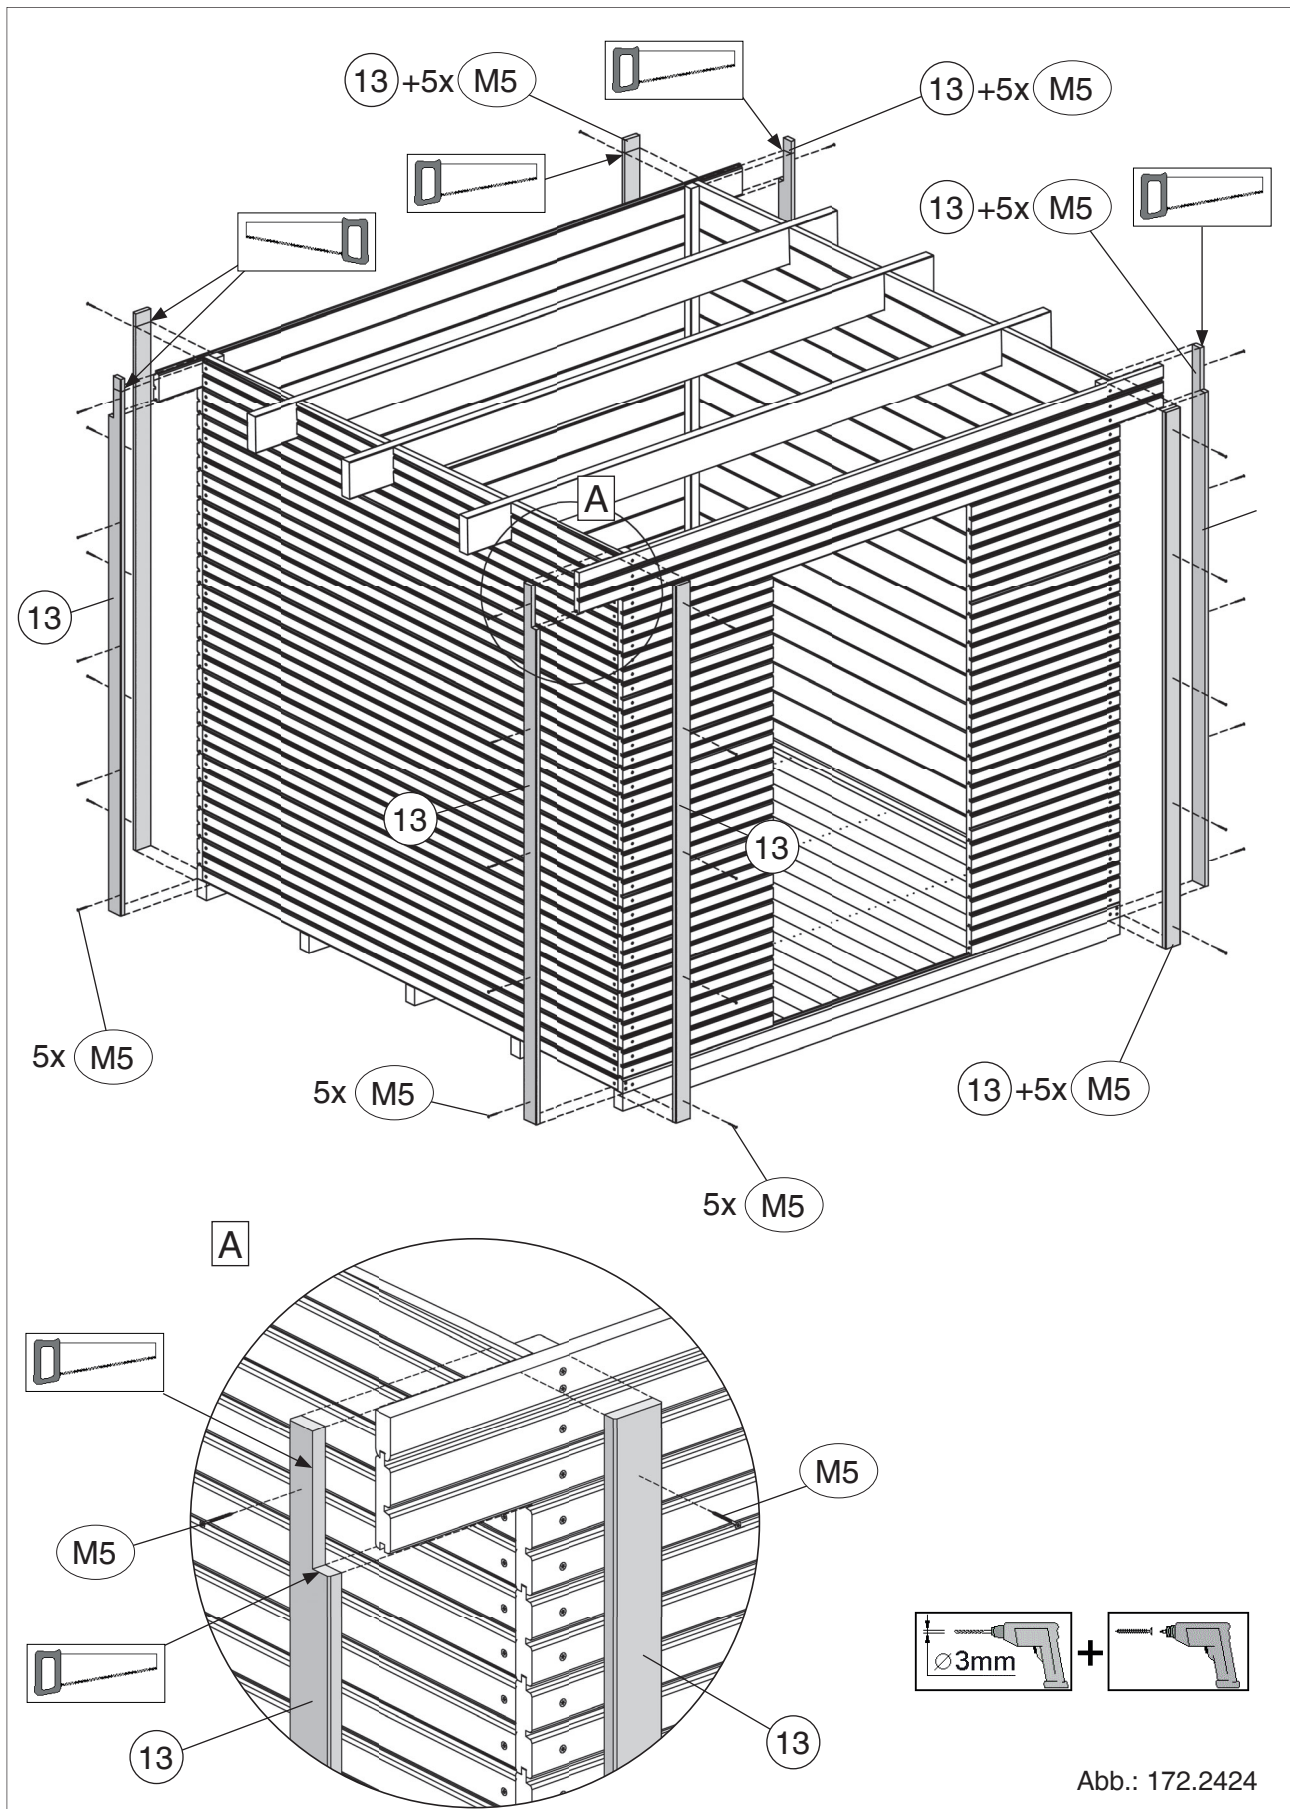

9


Art.-Nr.: 172.2121
Art.-Nr.: 172.2424

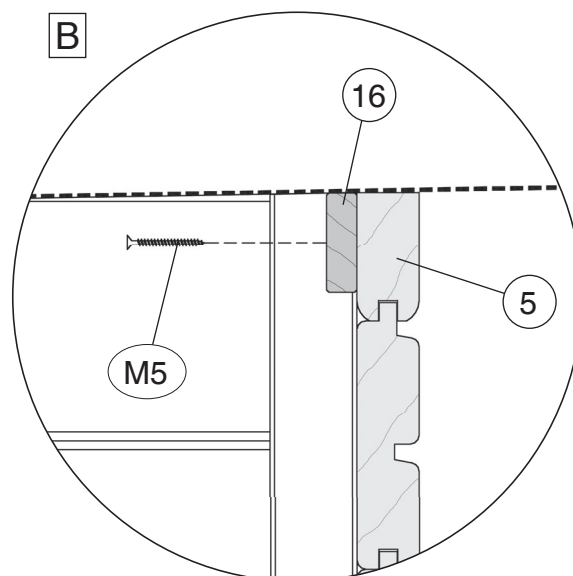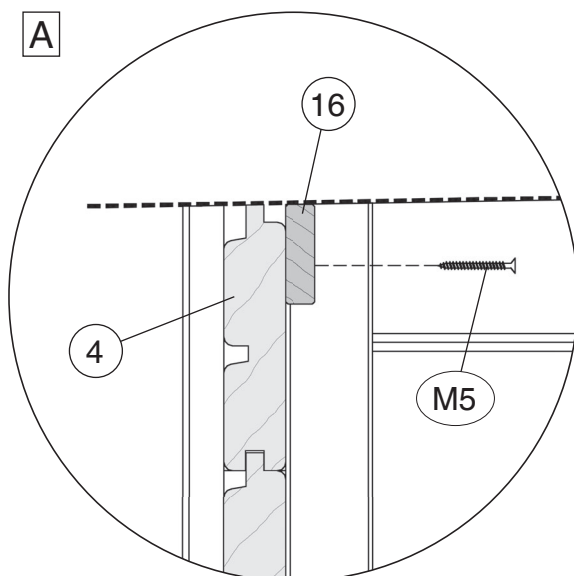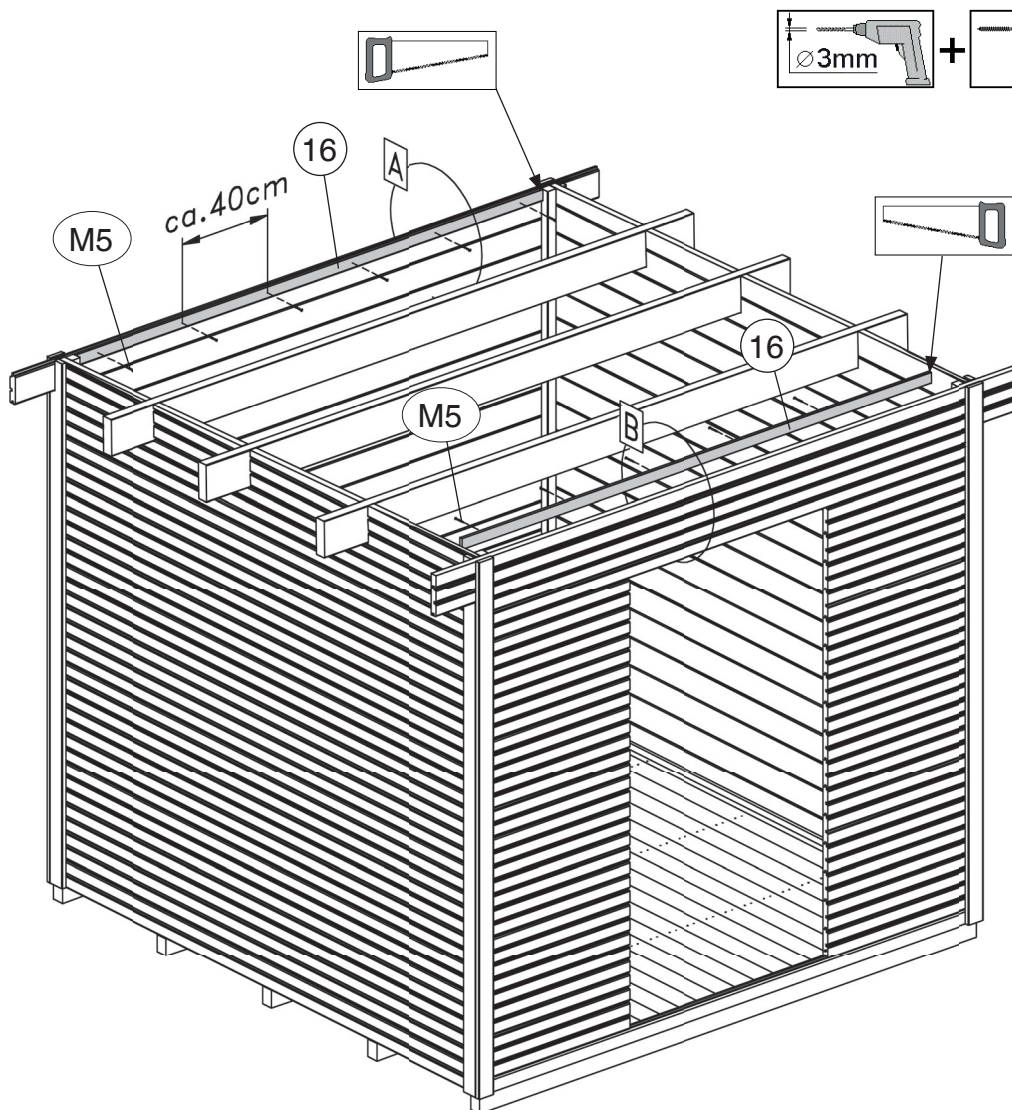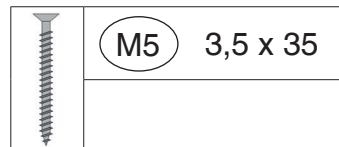

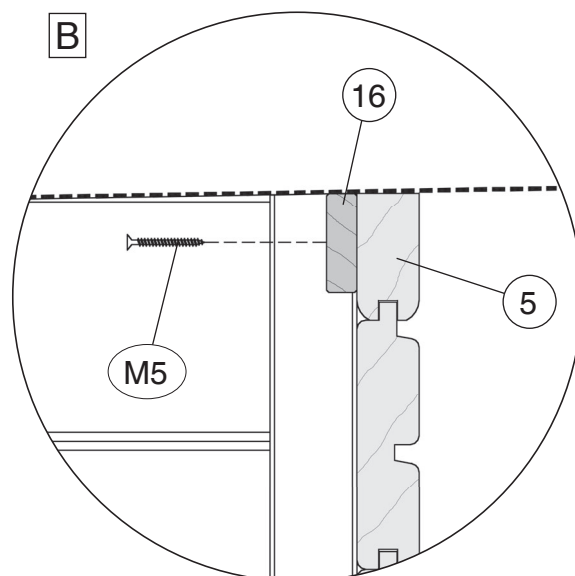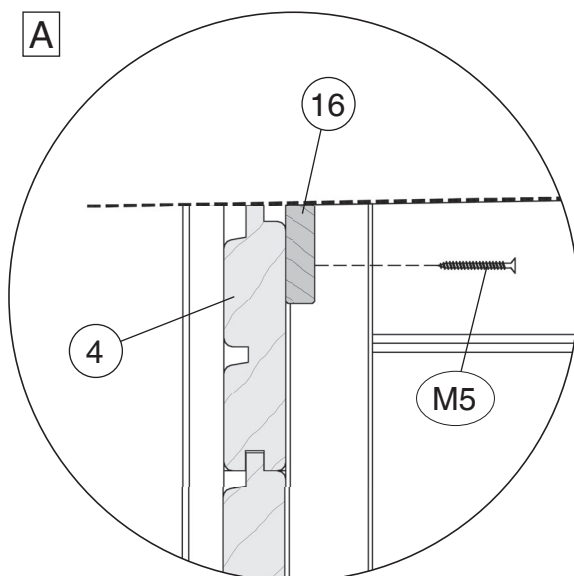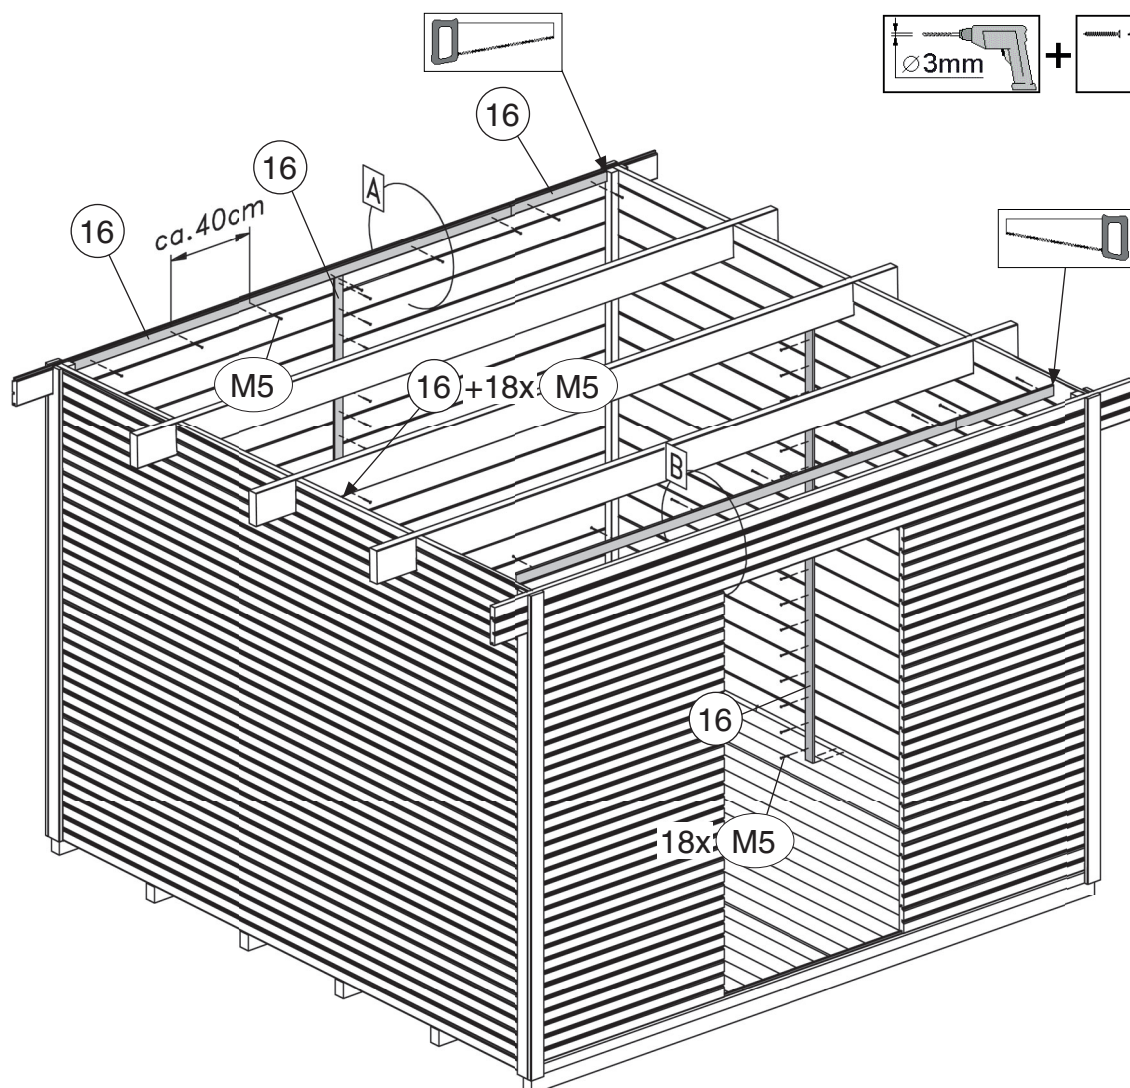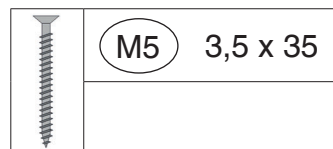


10**Art.-Nr.: 172.2121**

	M7	2,2 x 55

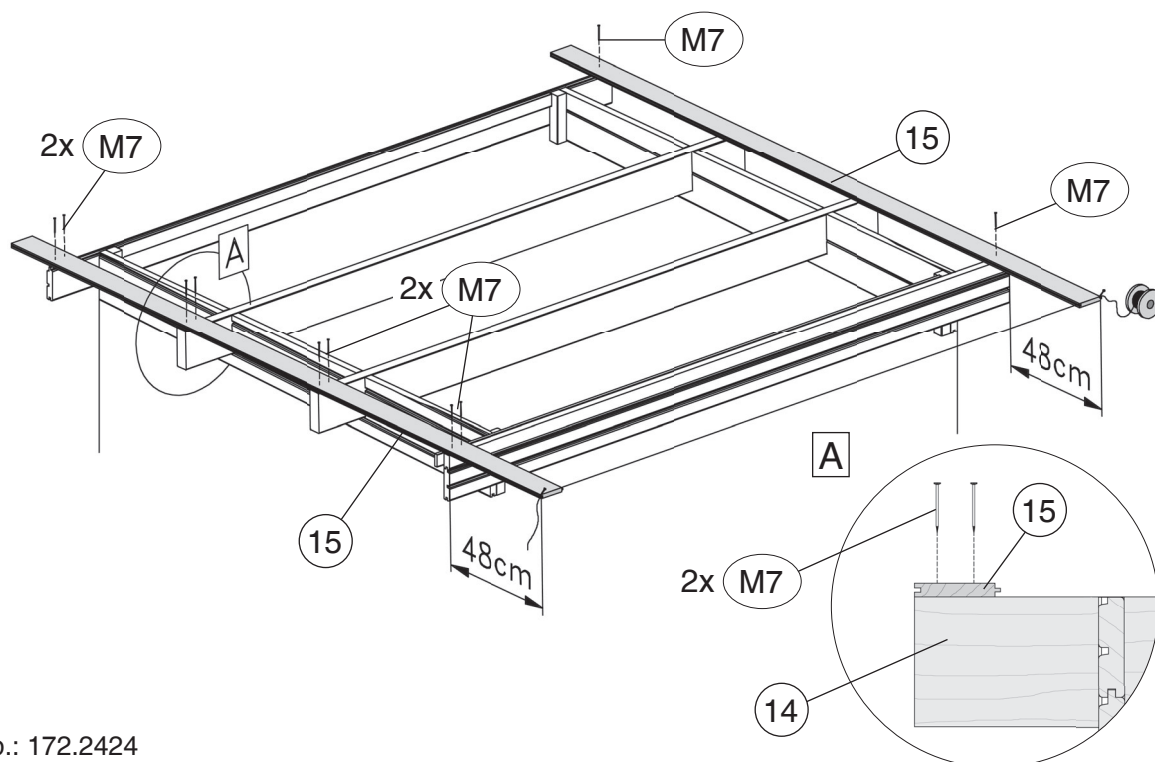
**10****Art.-Nr.: 172.2424**
Art.-Nr.: 172.3030

	M7	2,2 x 55

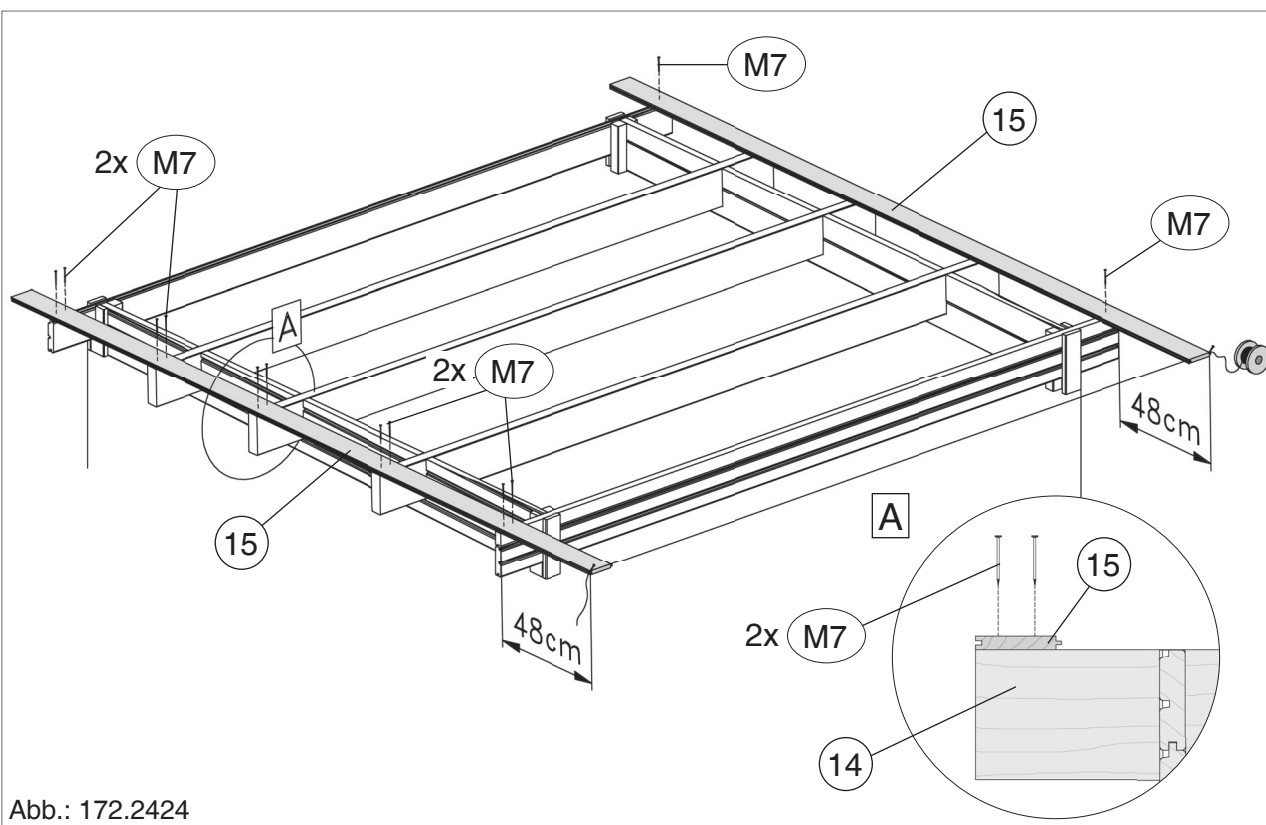


11



	M7	2,2 x 55

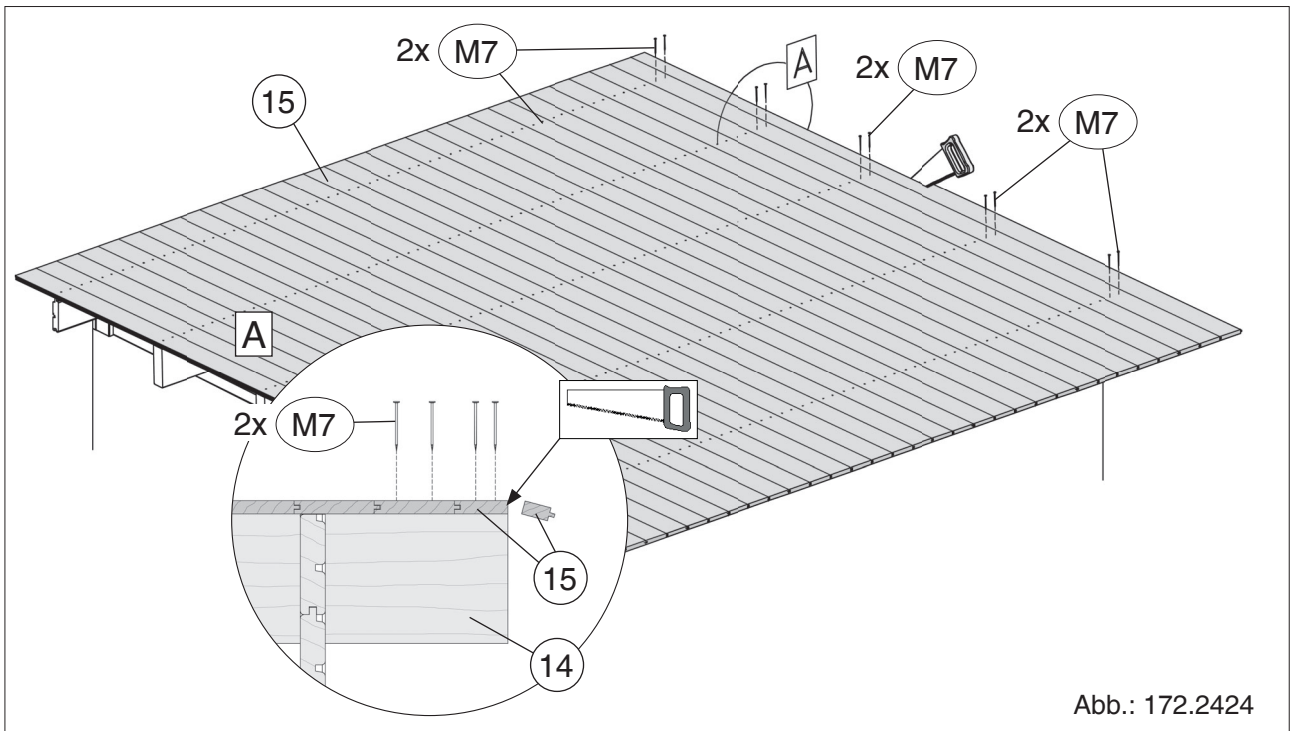

12

	M6	3,0 x 30

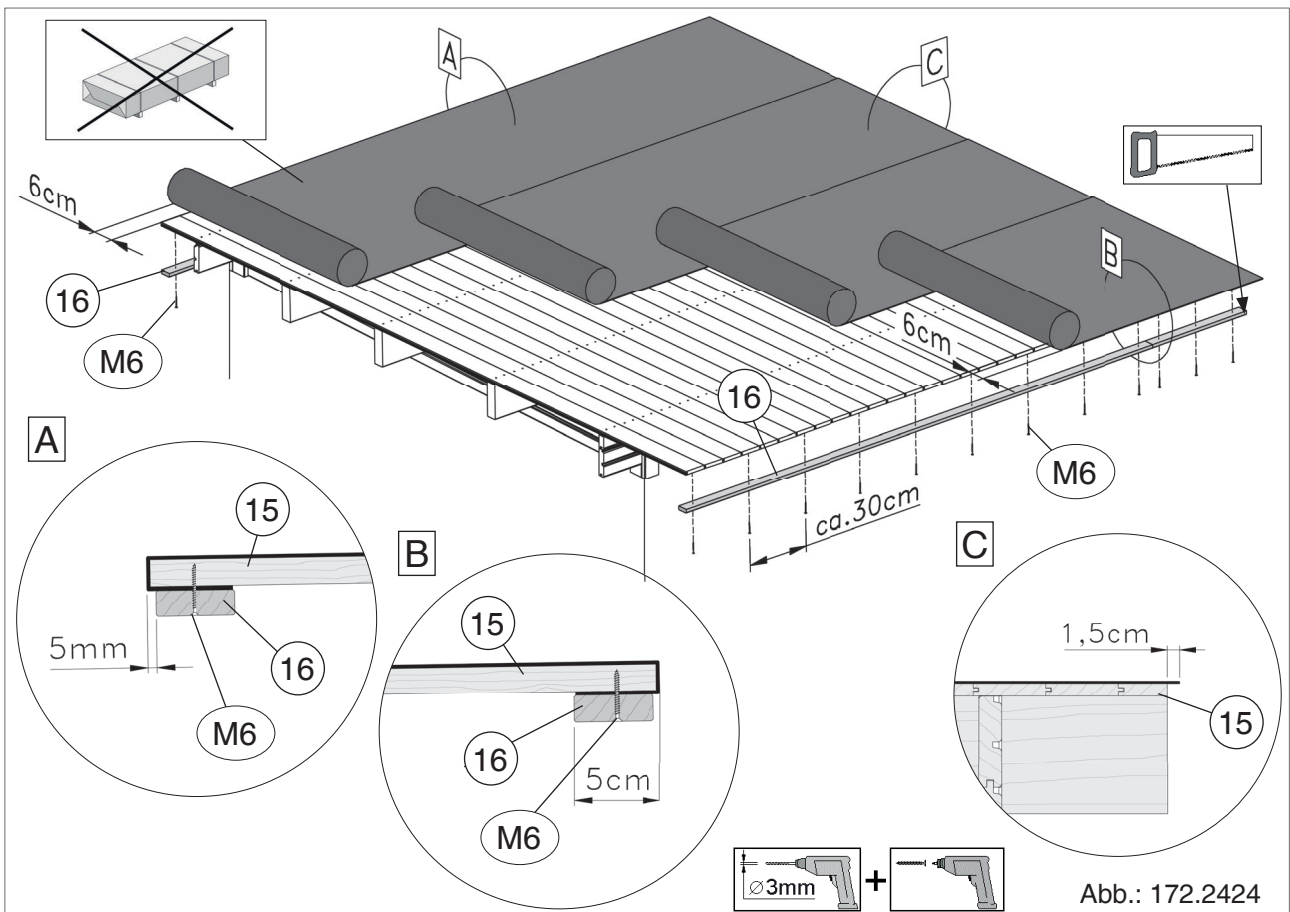

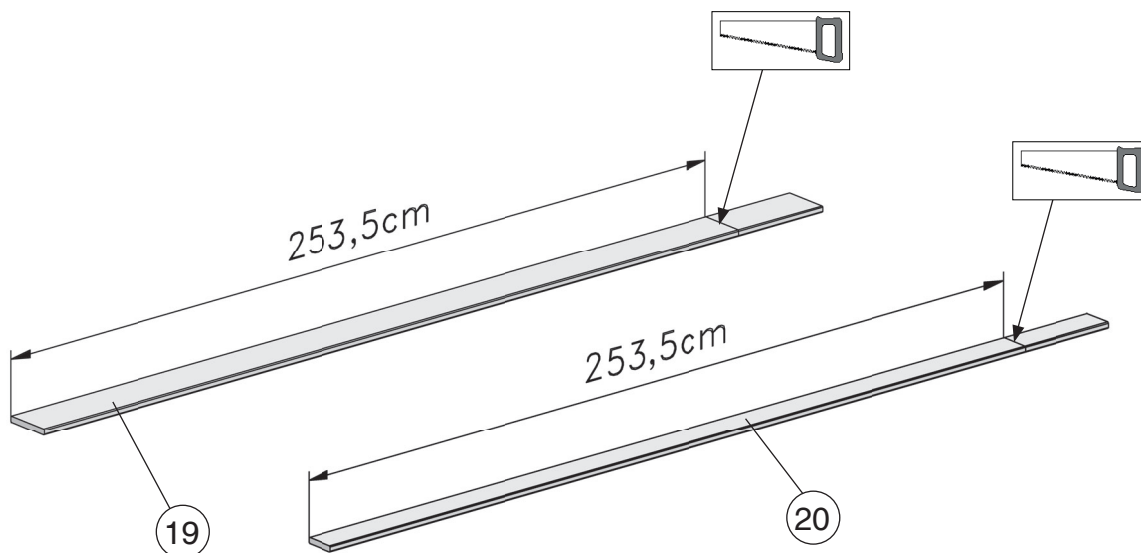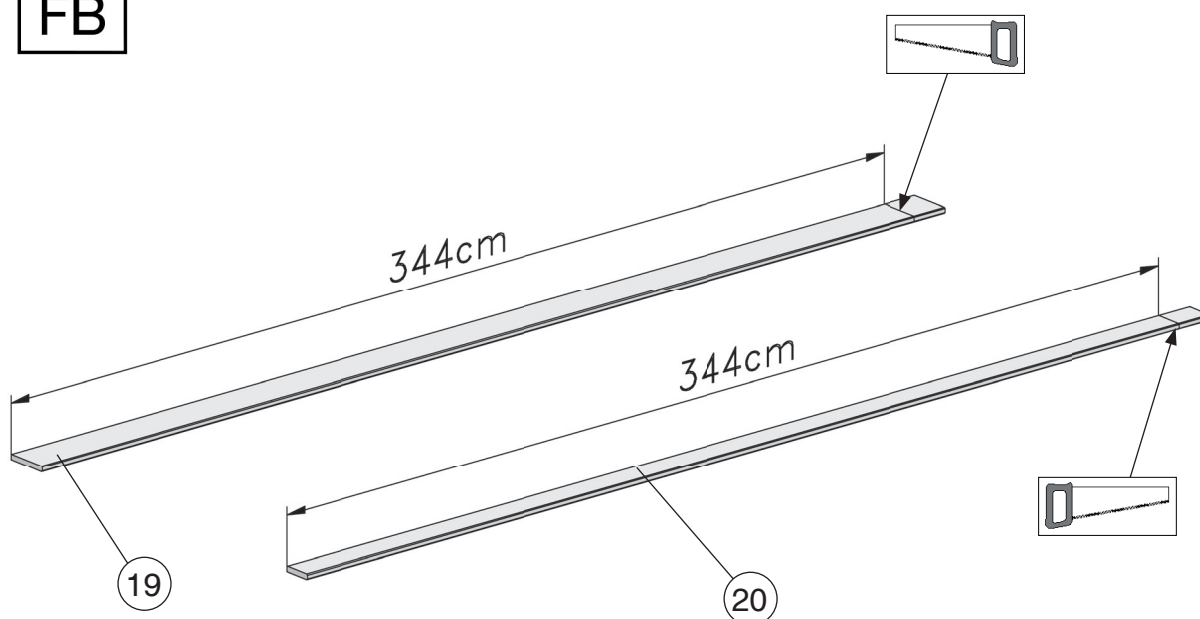13**Art.-Nr.: 172.2121****FB****13****Art.-Nr.: 172.3030****FB**

14

	M4 4,0 x 40
---	-------------

14.1

1x FB

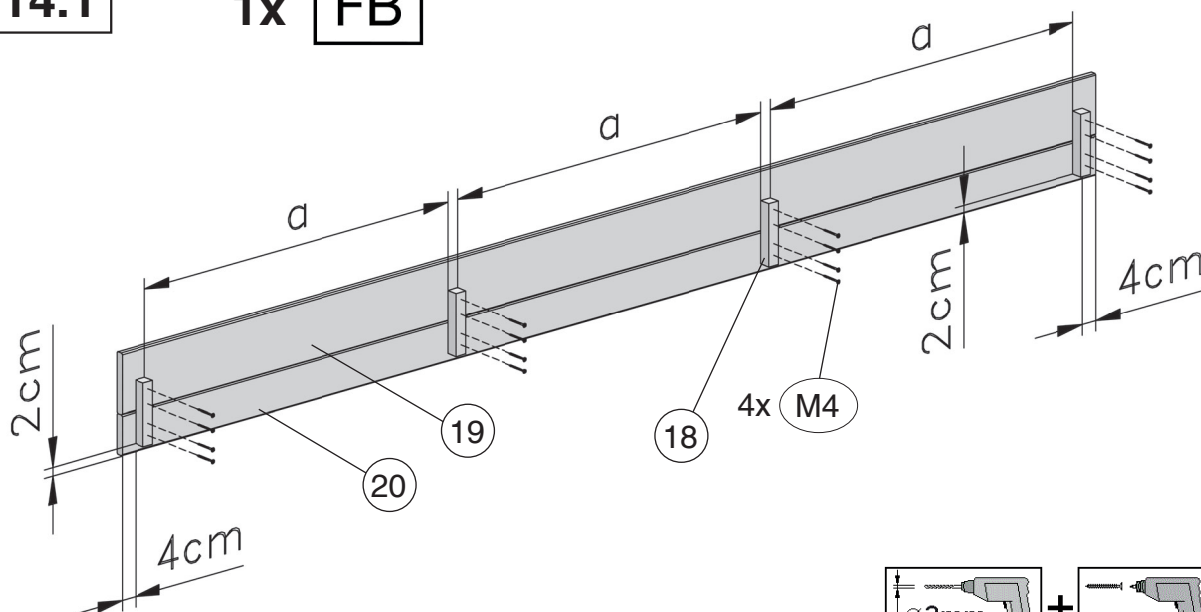


Abb.: 172.2424

14.2

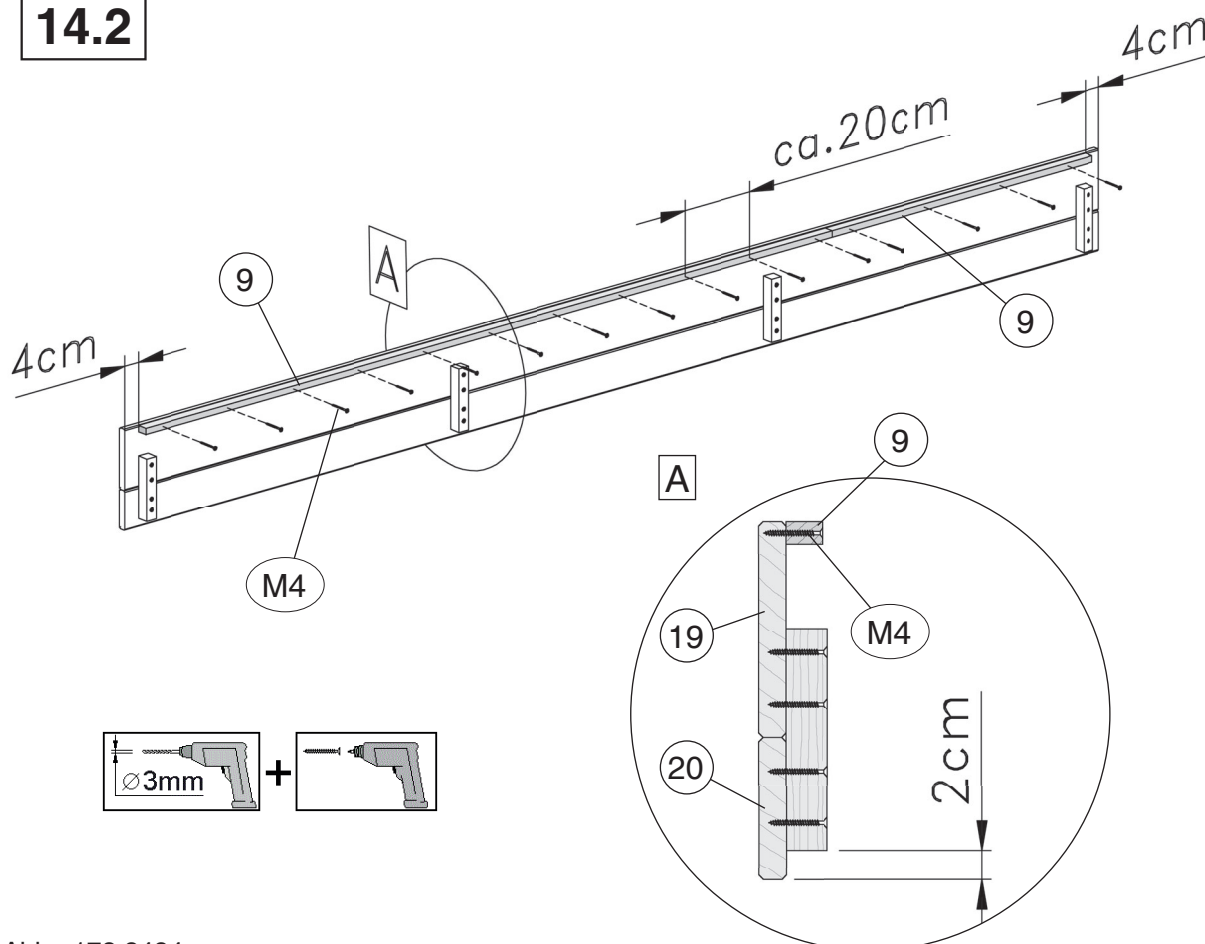



Abb.: 172.2424

15

	<table border="1"> <tr> <td>M4</td><td>4,0 x 40</td></tr> <tr> <td colspan="2"></td></tr> </table>	M4	4,0 x 40		
M4	4,0 x 40				

FB

a=a!

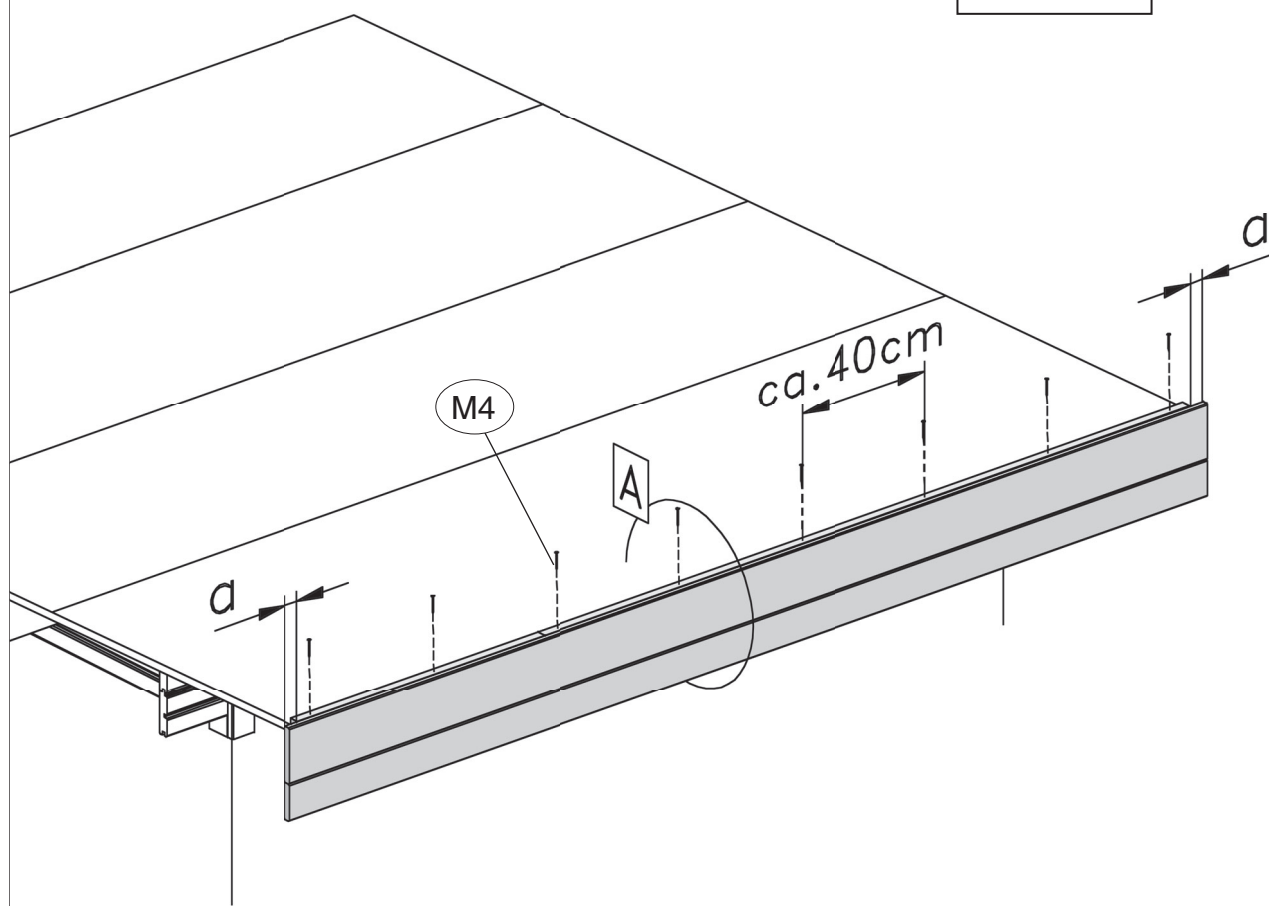

A






Abb.: 172.2424

	M4 4,0 x 40

SB-L

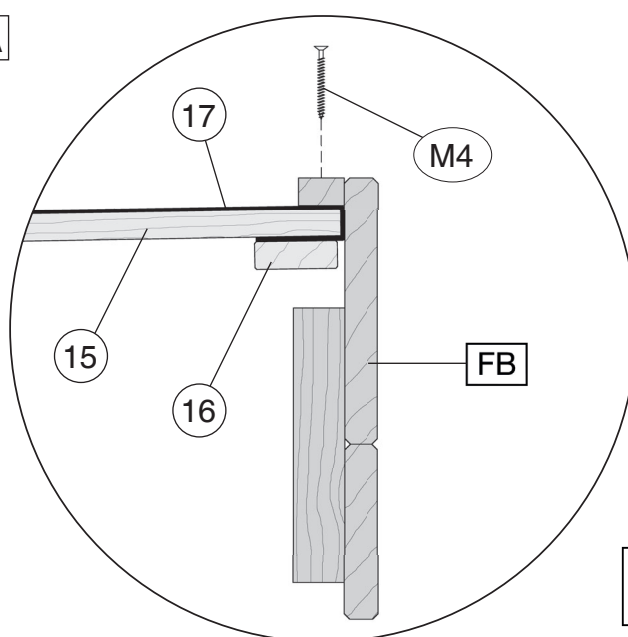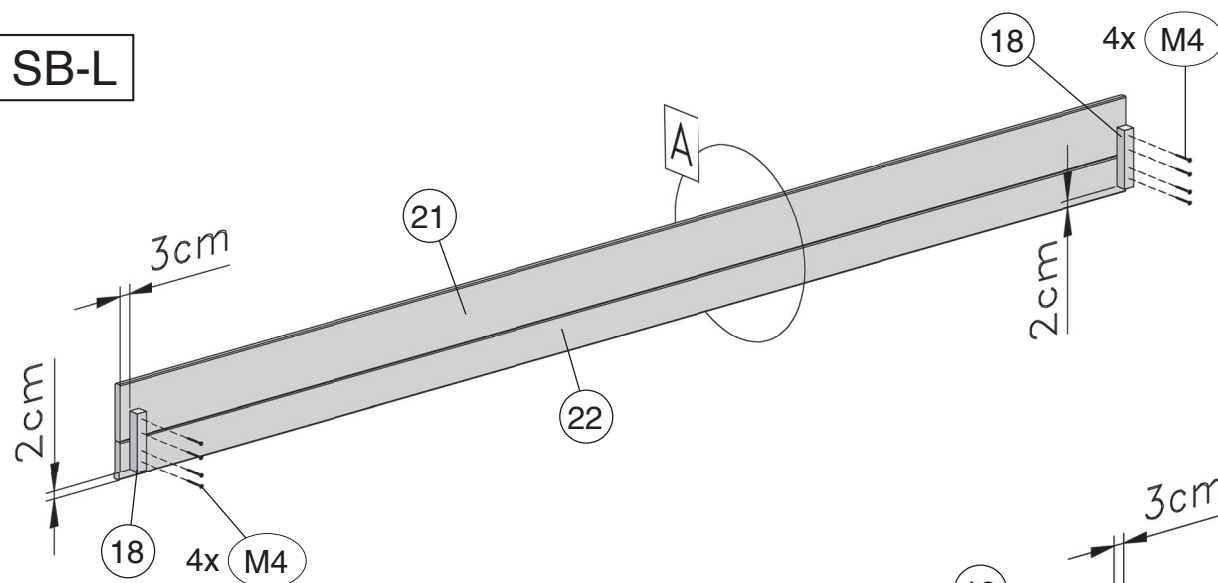

SB-R







Abb.: 172.2424

	M4 4,0 x 40
---	-------------


17.1

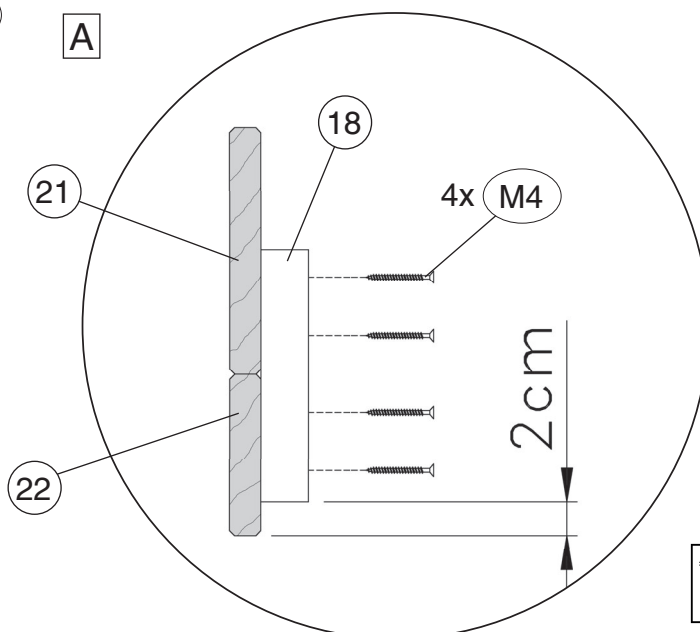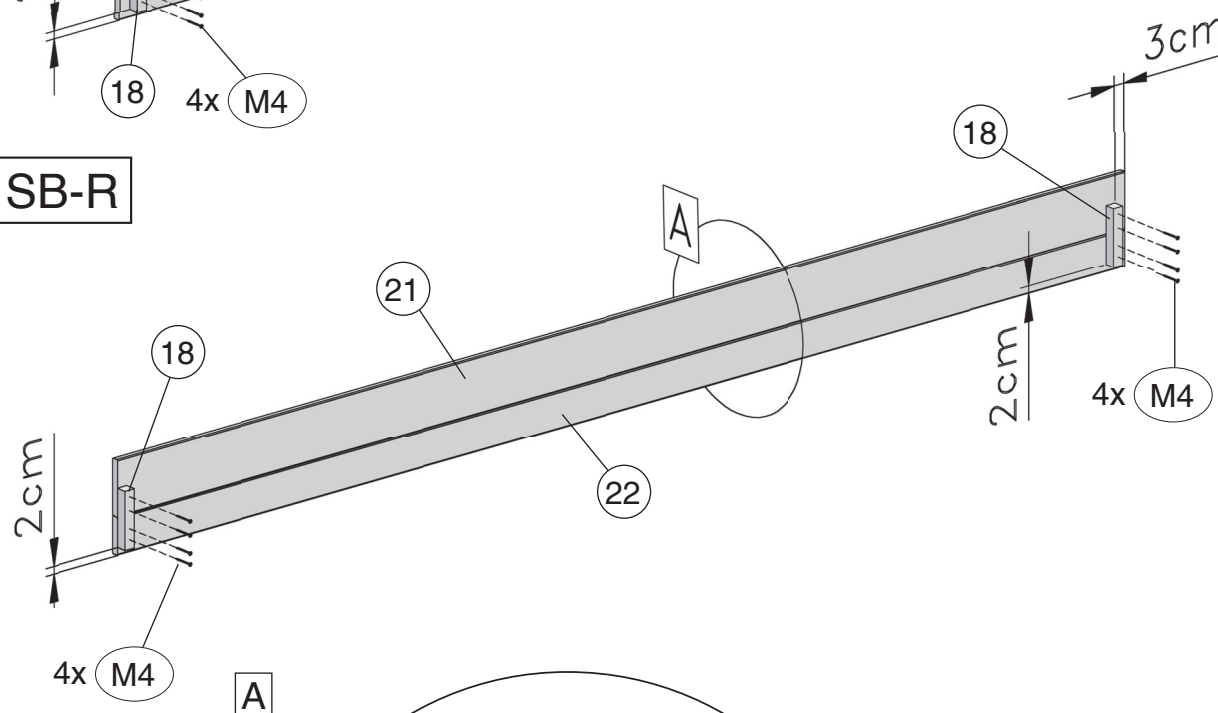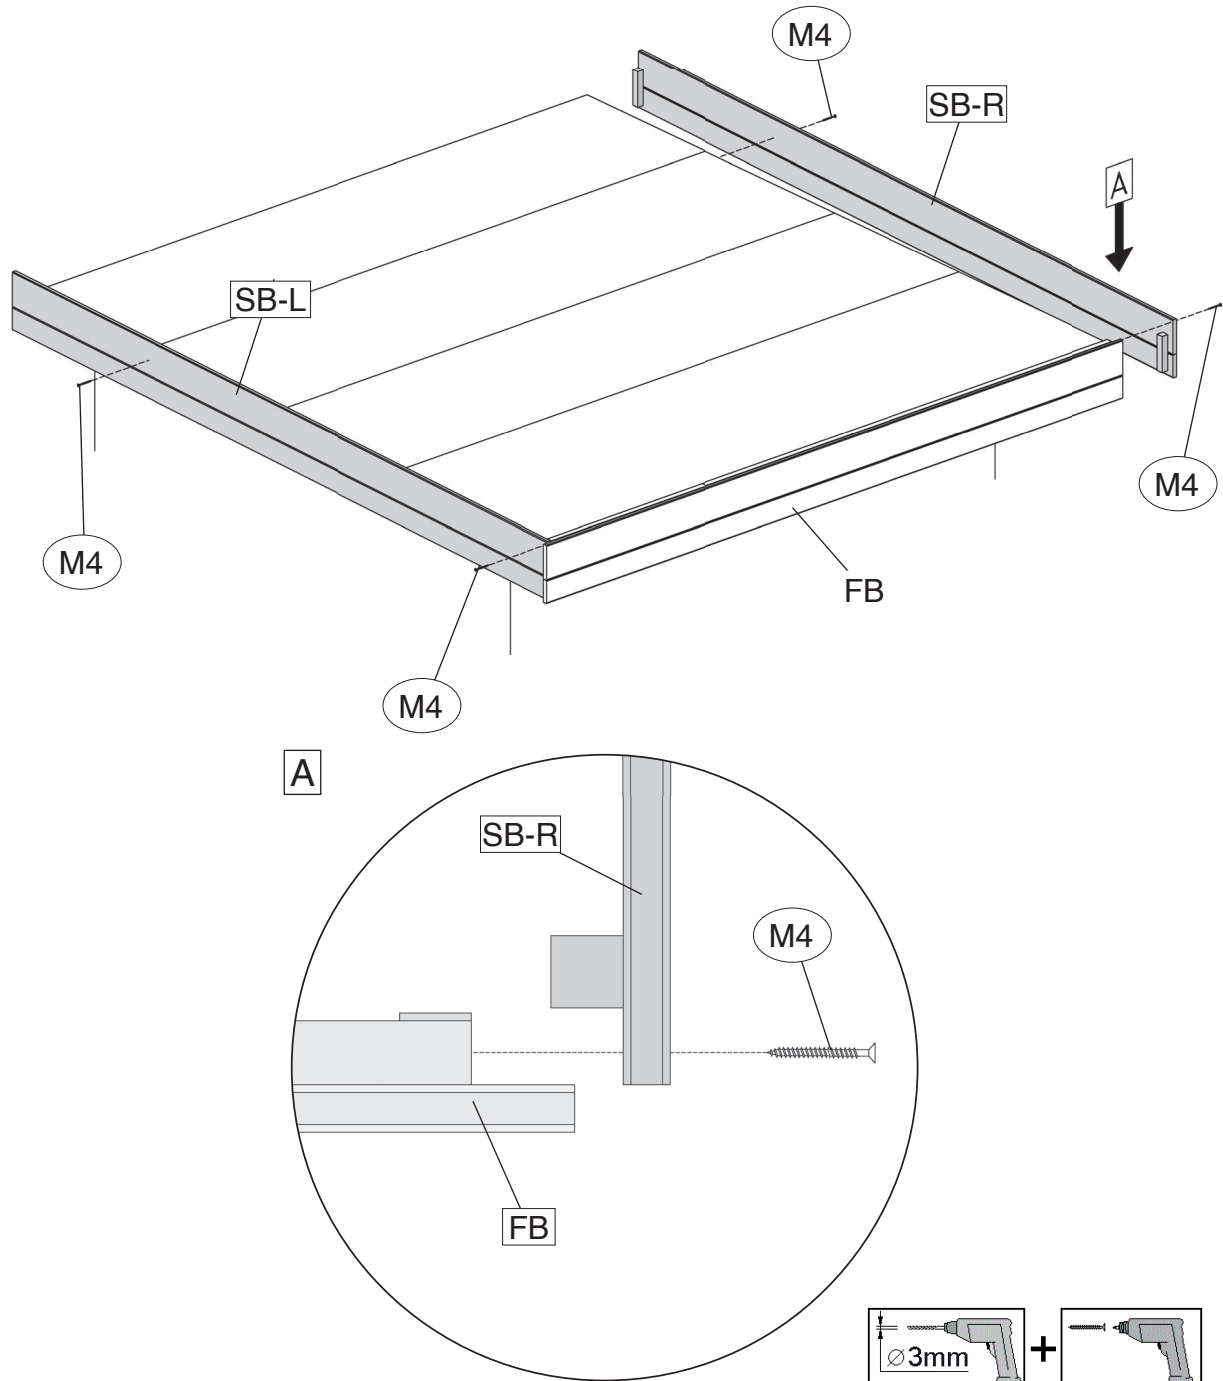

Seitenblende SB an die Frontblende FB schrauben, in Waage bringen und mit einer weiteren Schraube an der hinteren Dachpfette befestigen. Dachpfettenumrisse und Dachschalungsunterkante auf den Seitenblenden markieren!

Abb.: 172.2424

17

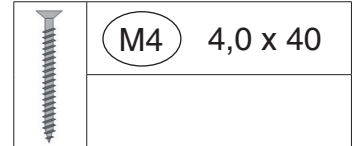

17.2

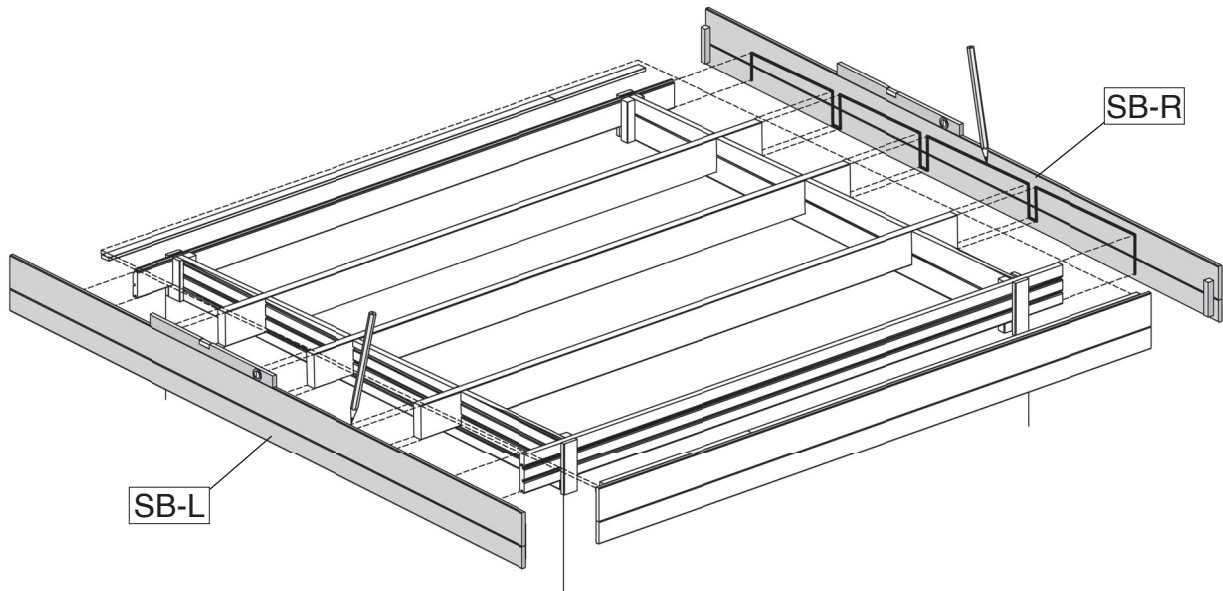


Abb.: 172.2424

17.3

Seitenblenden SB abnehmen und Verbinder Pos.18 aufschrauben!


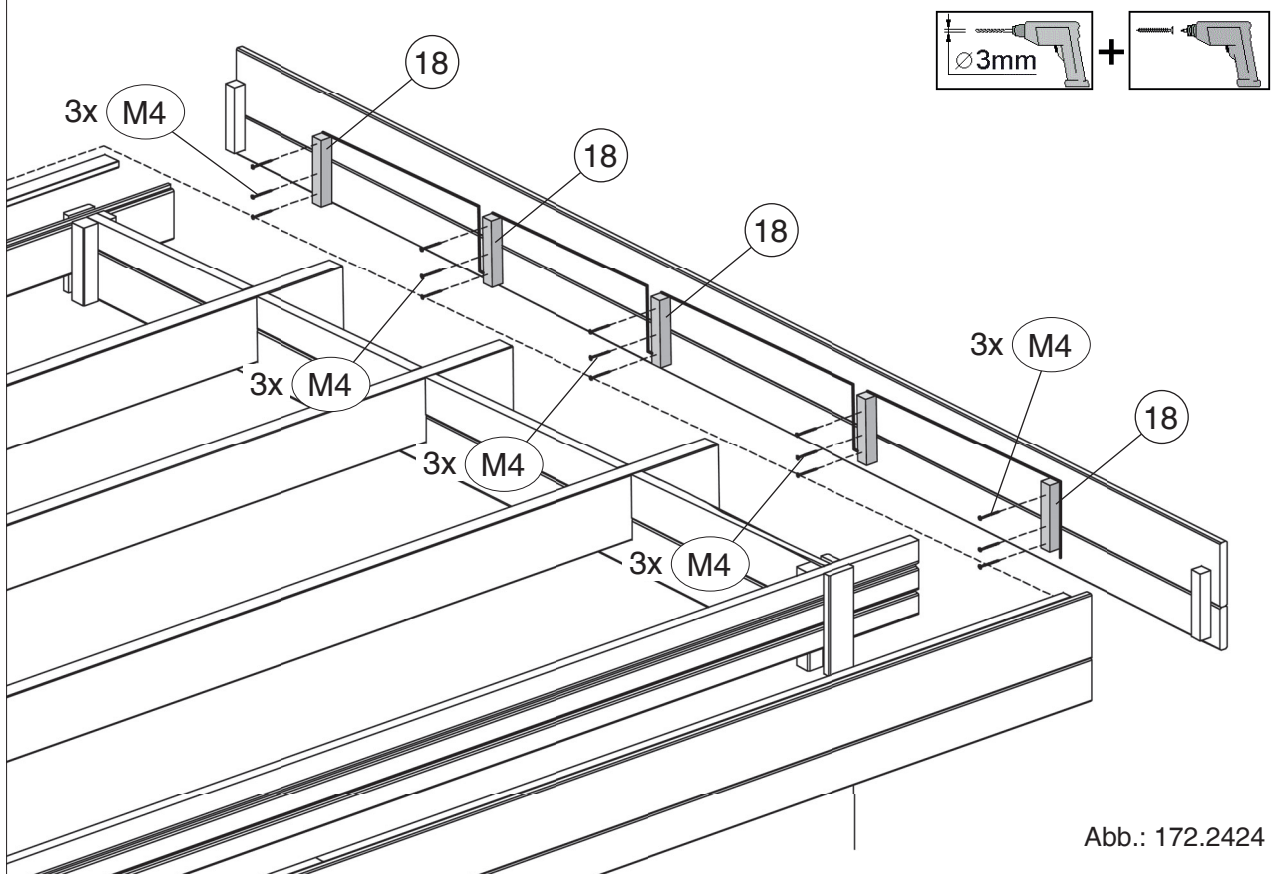


Abb.: 172.2424

	M3	4,0 x 60
	M4	4,0 x 40

17.4

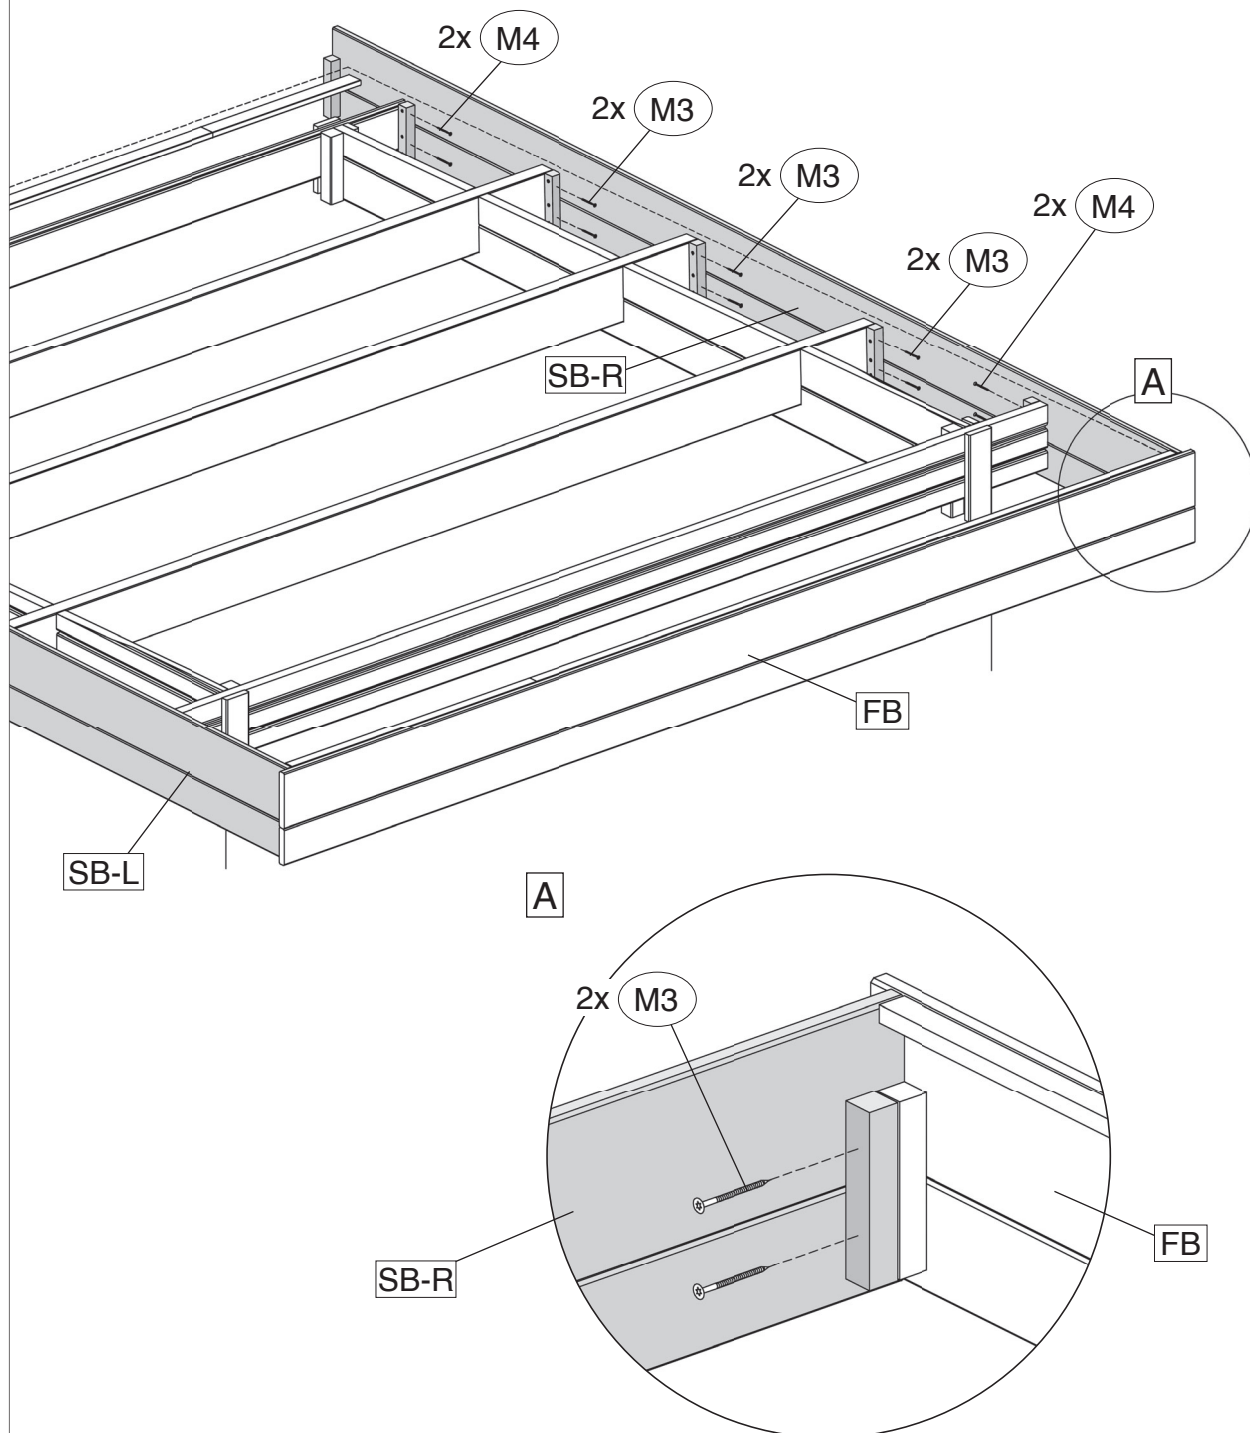

Seitenblenden SB entgültig befestigen!







Abb.: 172.2424


18

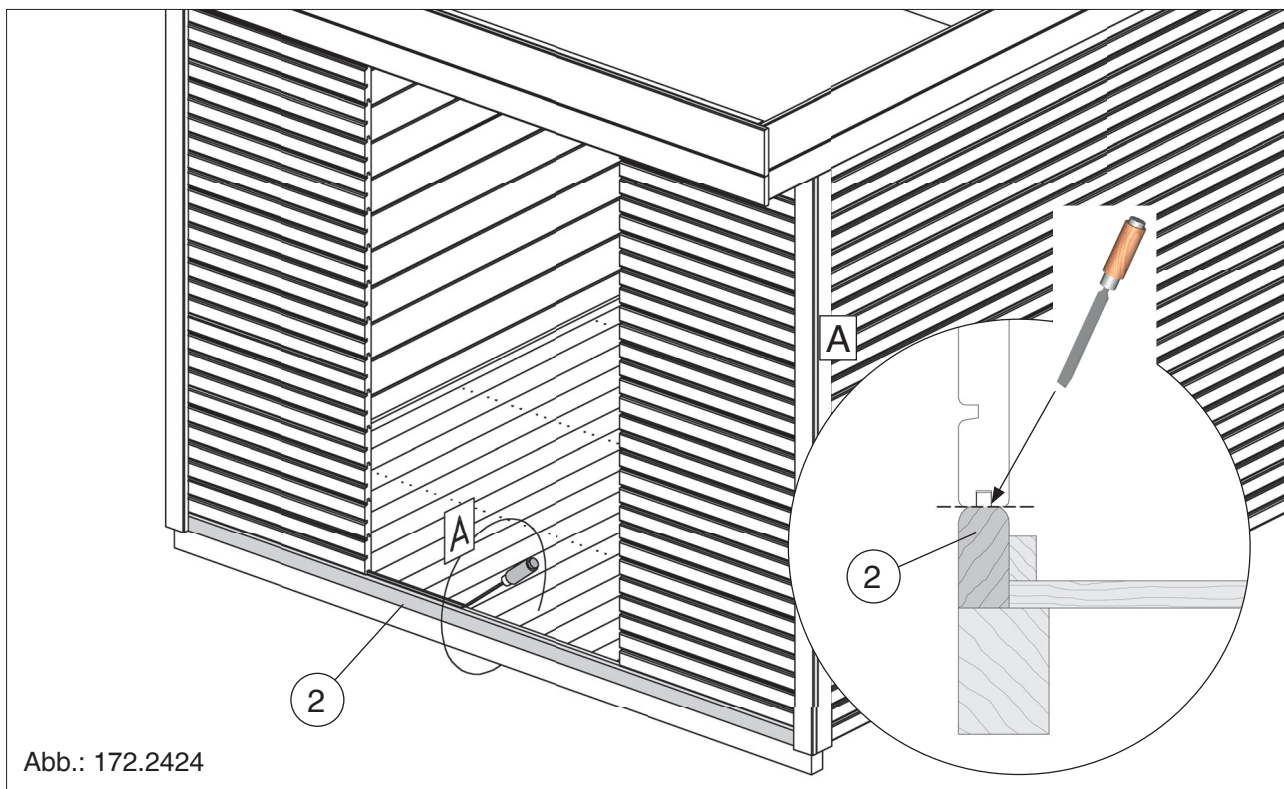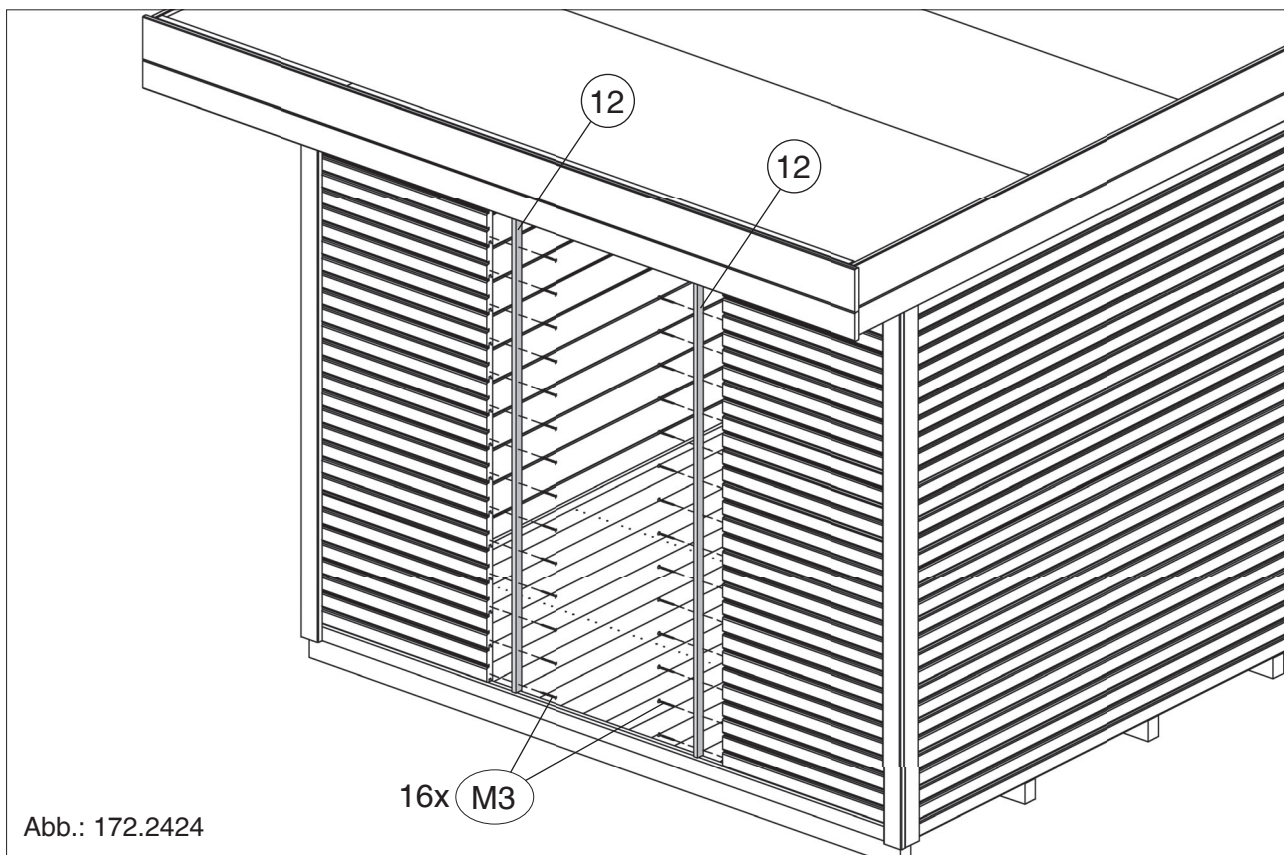


19

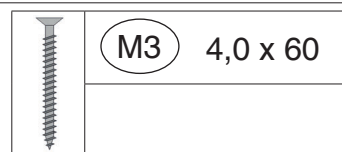



20

	M3	4,0 x 60		M5	3,5 x 35		M9
	M4	4,0 x 40					

20.1

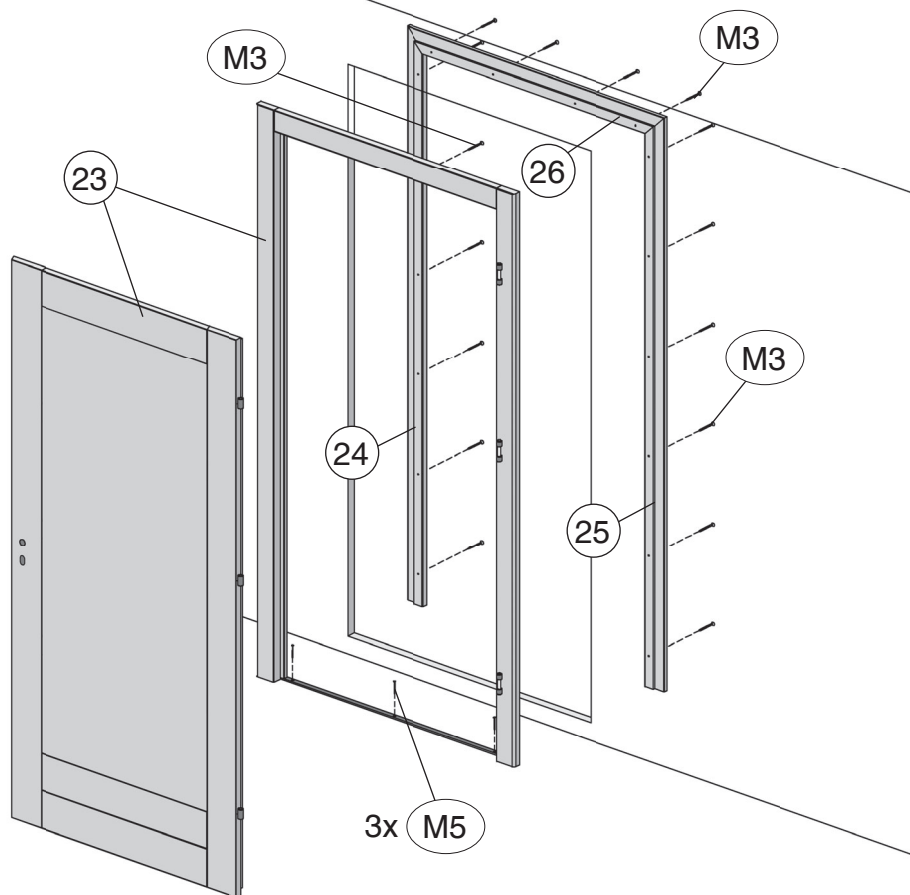

20.2

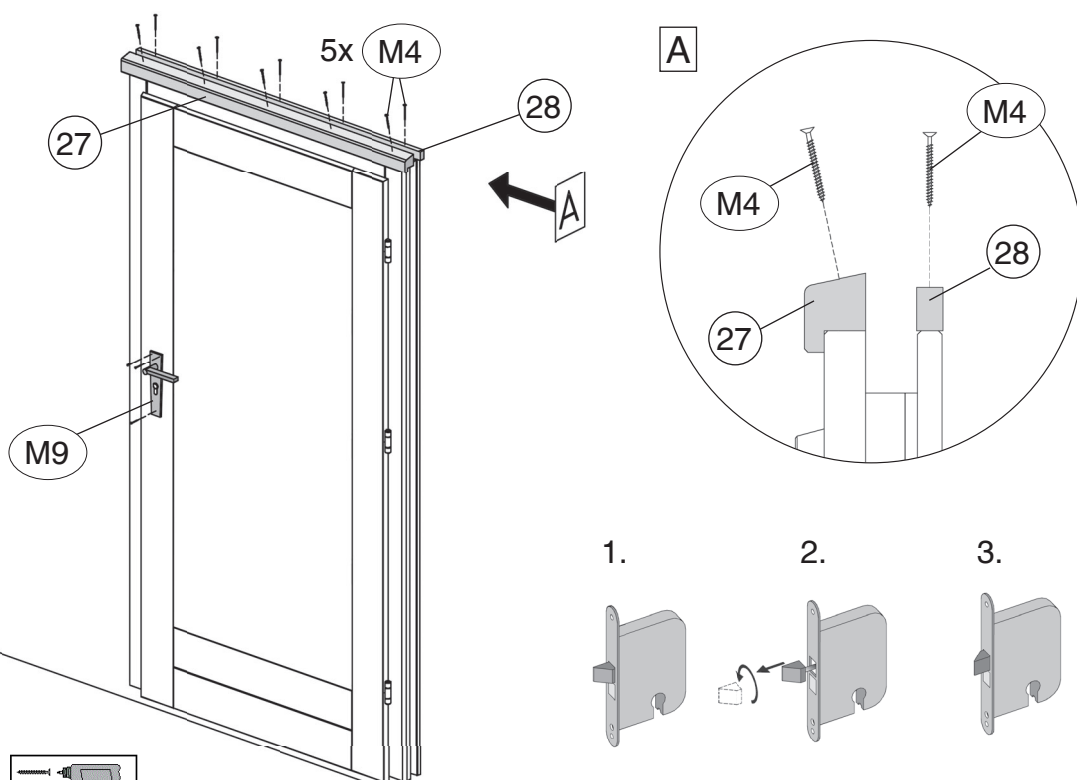

Notizen

www.weka-holzbau.com



WEKA Holzbau GmbH

Johannesstr. 16, 17034 Neubrandenburg

Tel.: +49 (0)395 42908-0

Fax: +49 (0)395 42908-83

Mail: info@weka-holzbau.com

Web: www.weka-holzbau.com

MA Art.-Nr.: 800.0286.17.48