




C-01

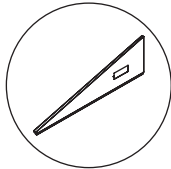


21L x 2

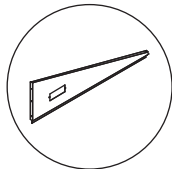


21R x 2

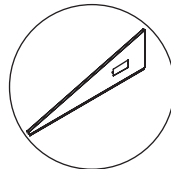


27L x 2

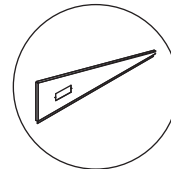


27R x 2

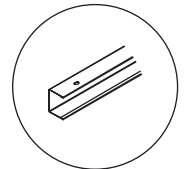


C1 x 2

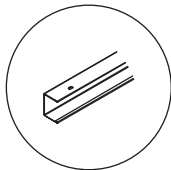


C2 x 2

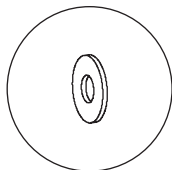


S3 x 16

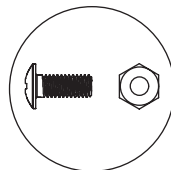


F2 x 24

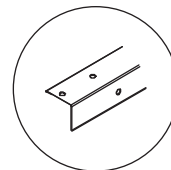


B1 x 2

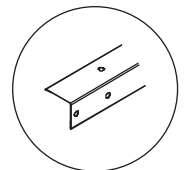


B2 x 2

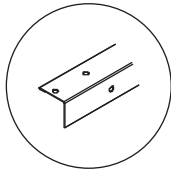


B3 x 2

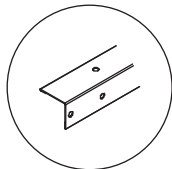

B4 x 2


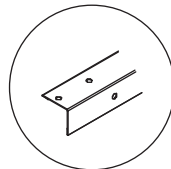


B5 x 2


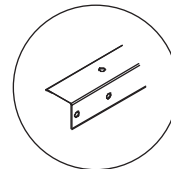


B6 x 2


1

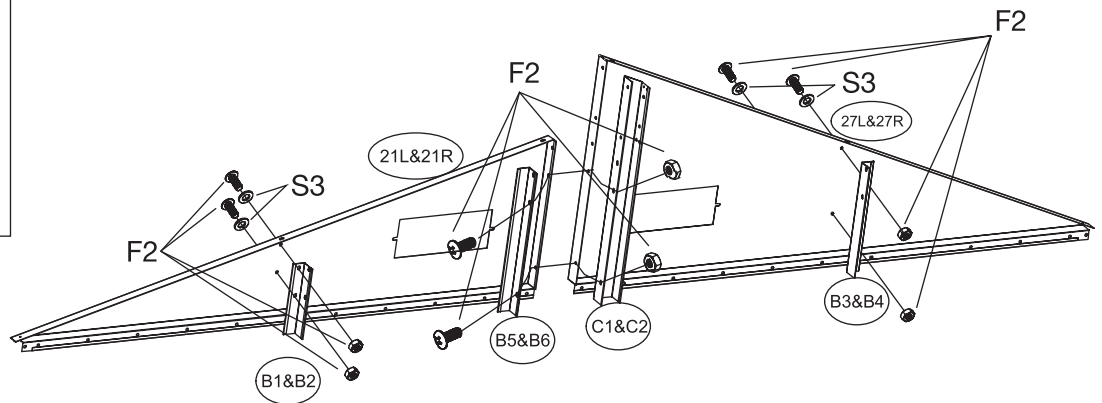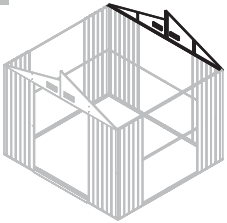


2

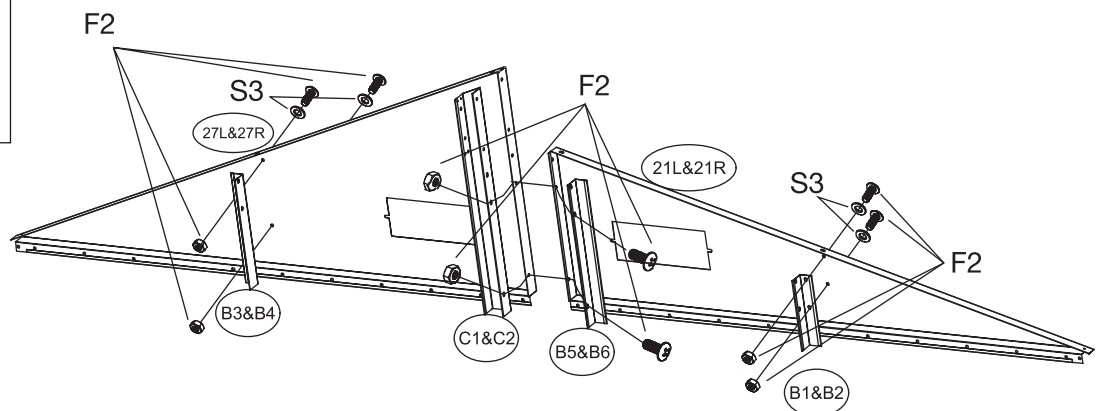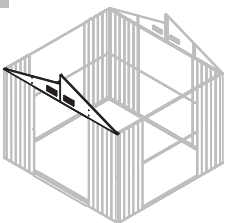

C-02

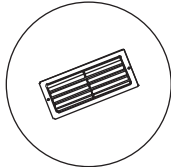



GF x 4

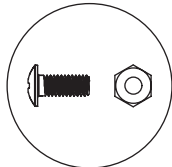


F2 x 8

x2


1

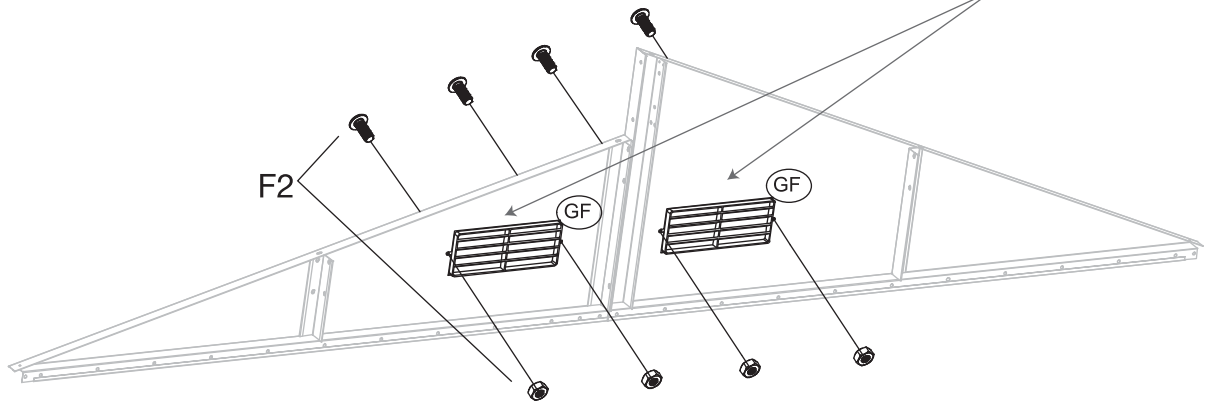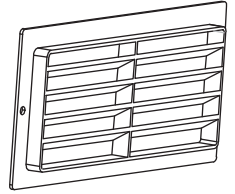


C-03

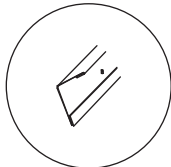


10L x 1

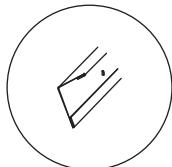

10R x 1


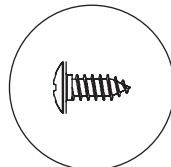


F1 x 1

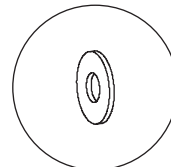


S3 x 13


1

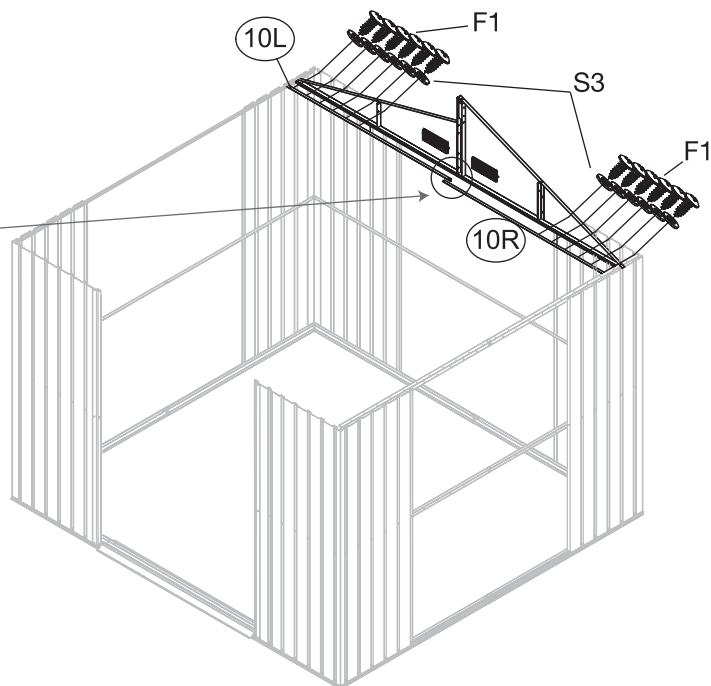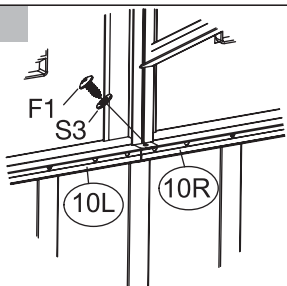


# C-04

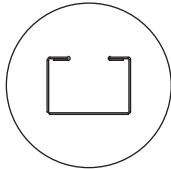


7 x 1

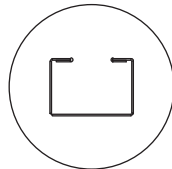


8 x 1

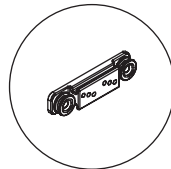



G2 x 4

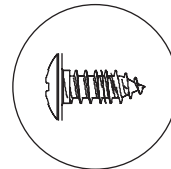


F1 x 12

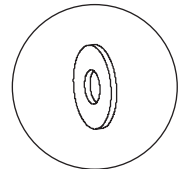

S3 x 12

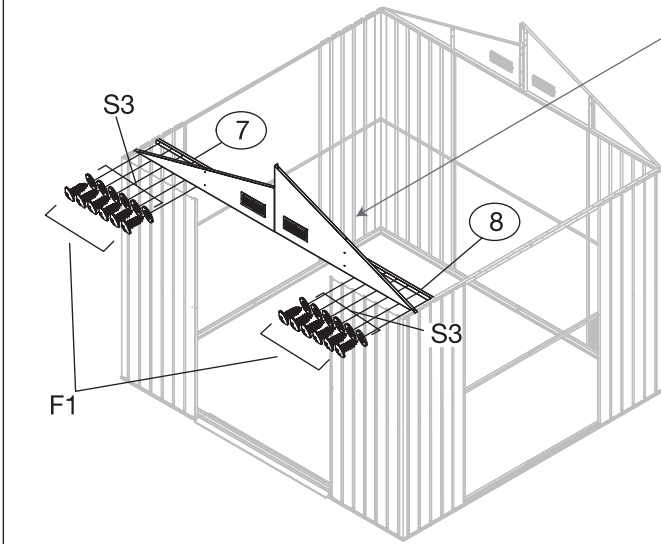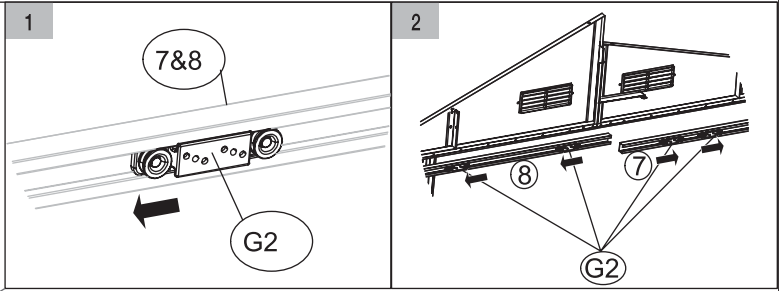


# C-05

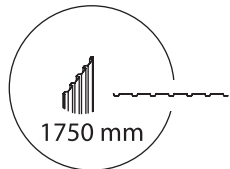


1750 mm


P3 x 6

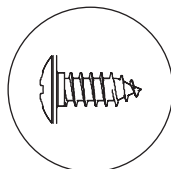

F1 x 117

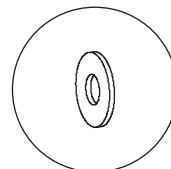


S3 x 117

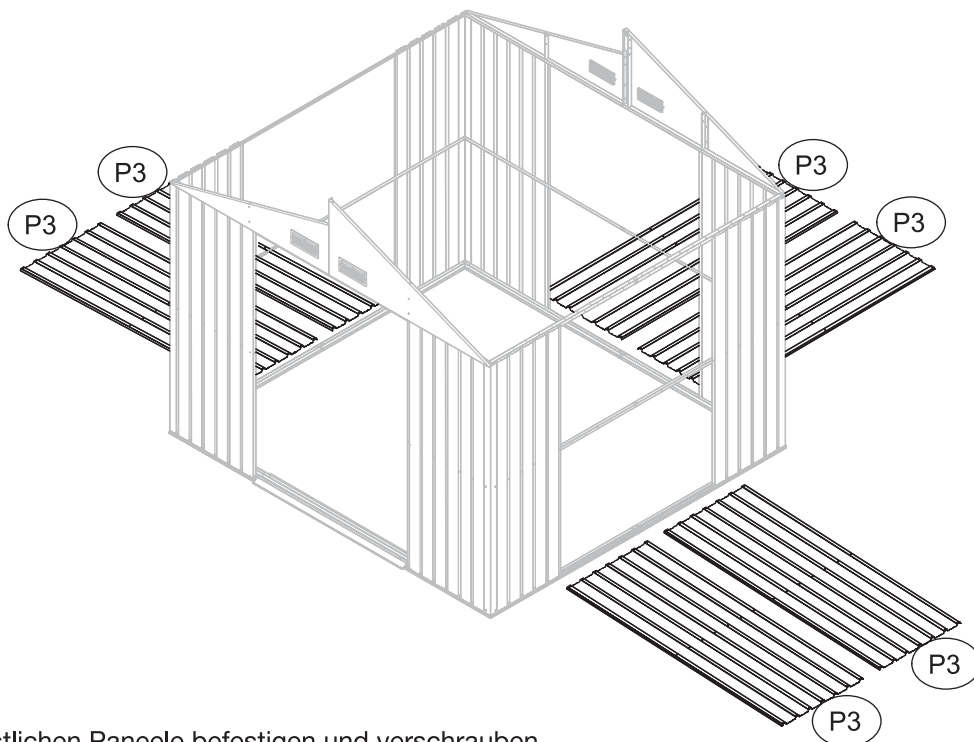


Die restlichen Paneele befestigen und verschrauben.


C-06

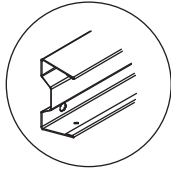


13 x 1

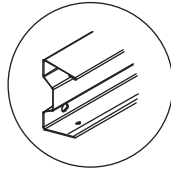


14 x 1

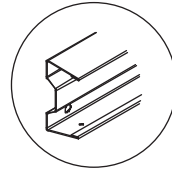

13\_1 x 1

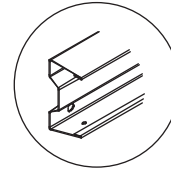


14\_1 x 1


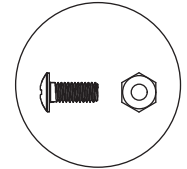


F2 x 8

1

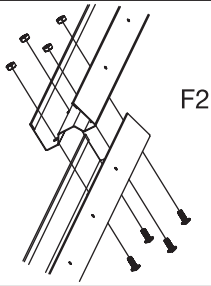


F2

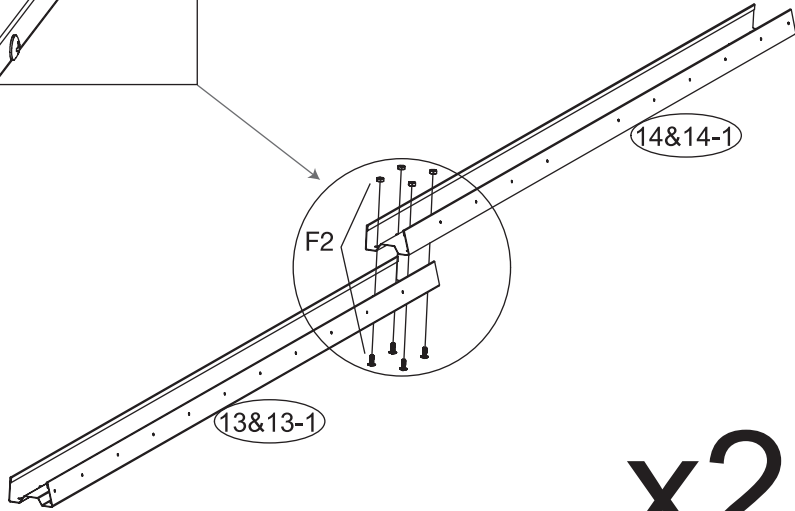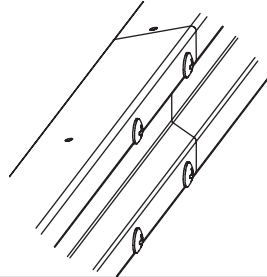


x2


C-07

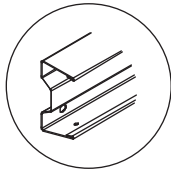


13 x 1

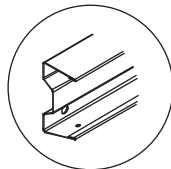

14 x 1

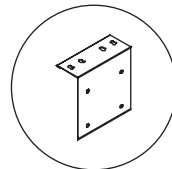


C9 x 1

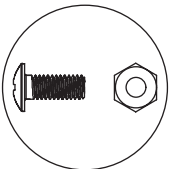




F2 x 4

1

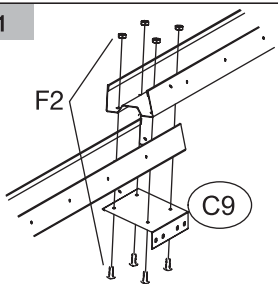


F2


C9

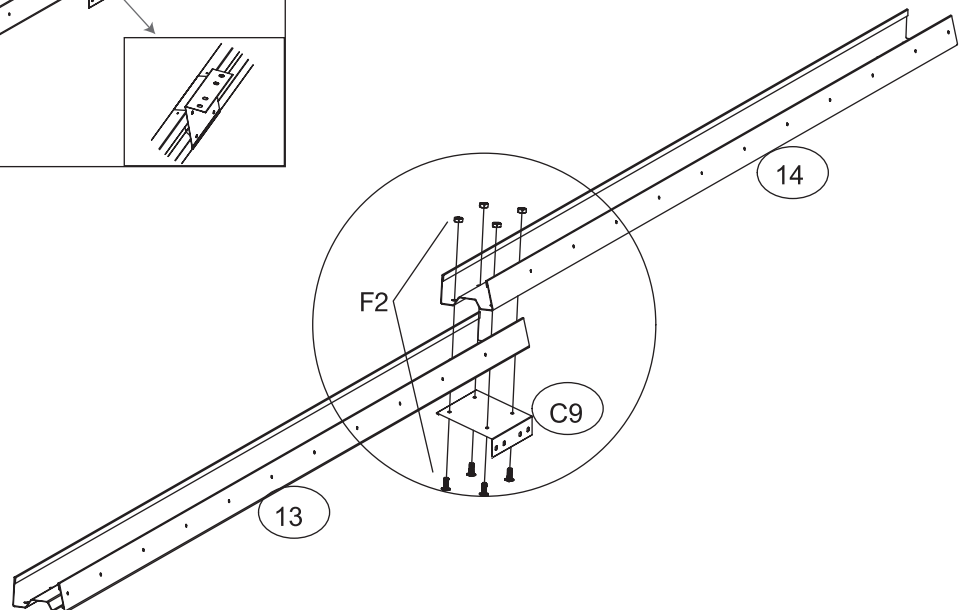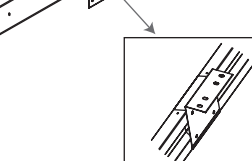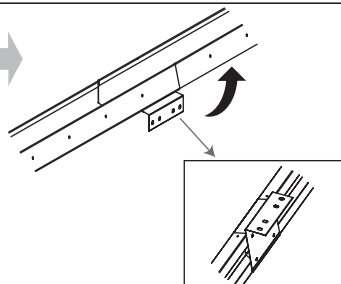

C-08

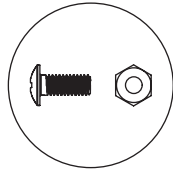

F2 x 12

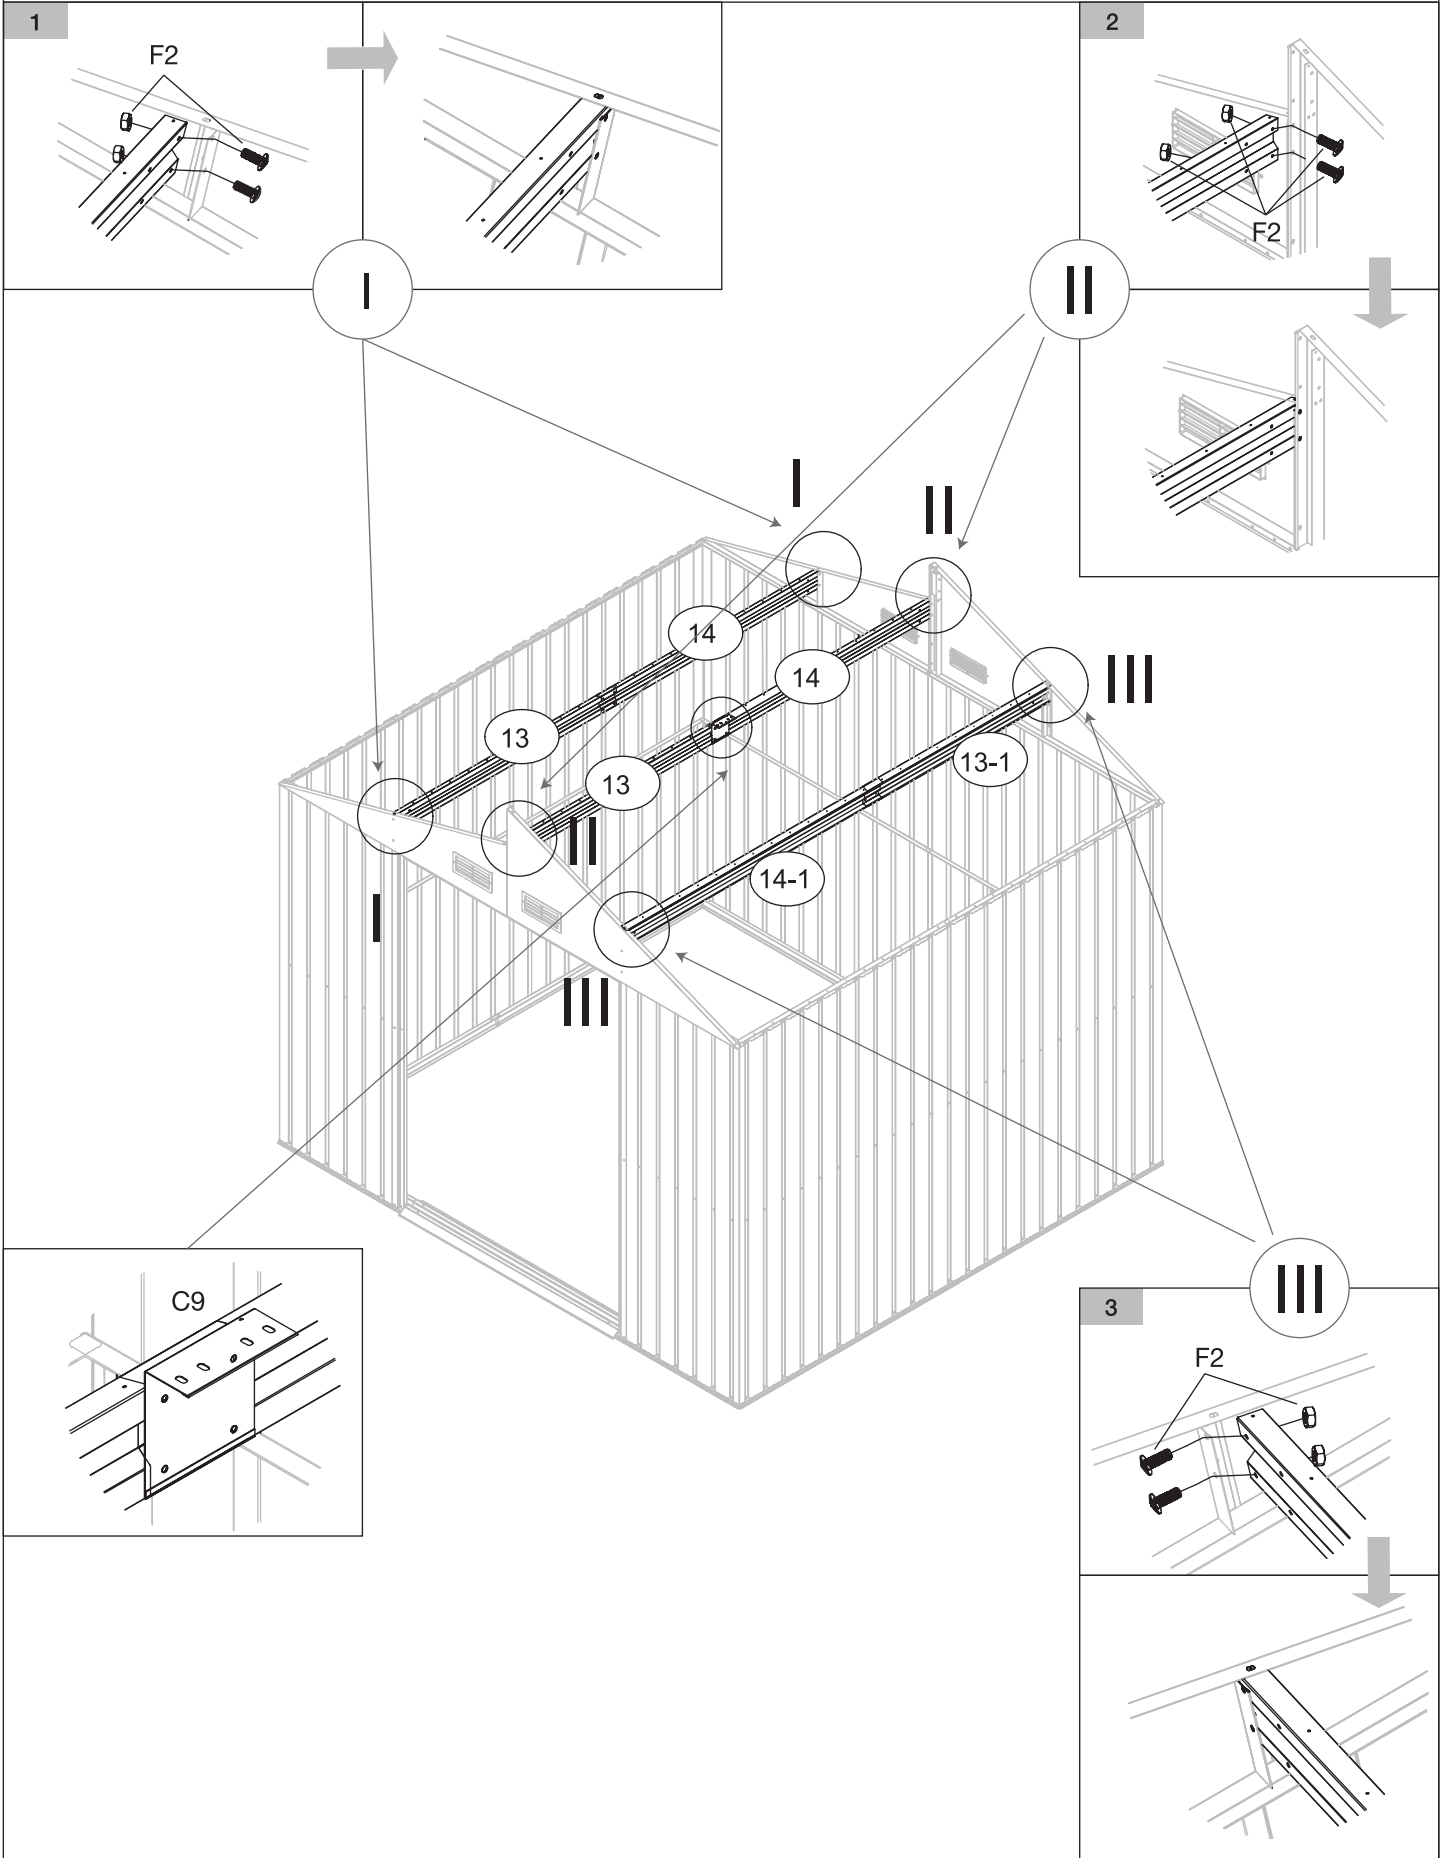

C-09

