



## RAMPED BICYCLE STORE

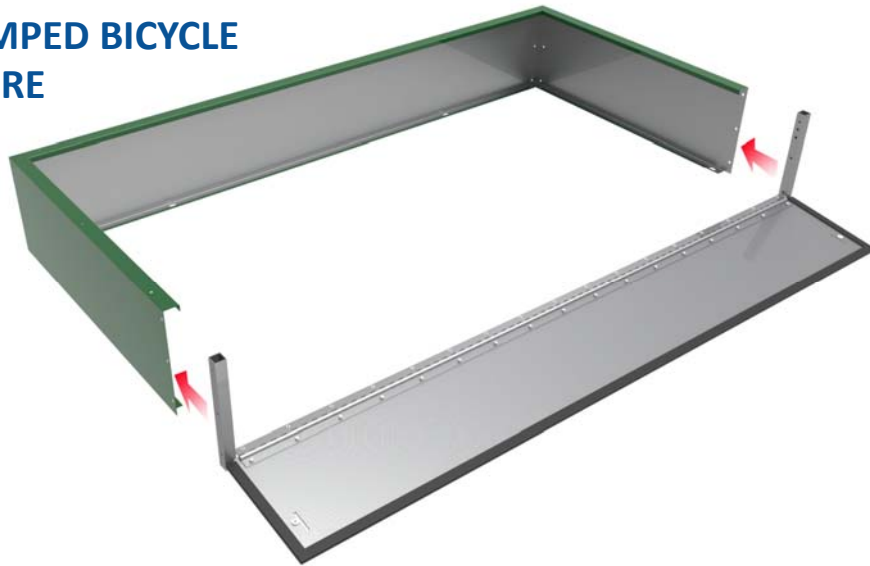


### Step 1

Assemble base using the main Bicycle Store assembly instructions supplied omitting front base (Part No. 1). Slot Ramp Assembly into position as shown above.

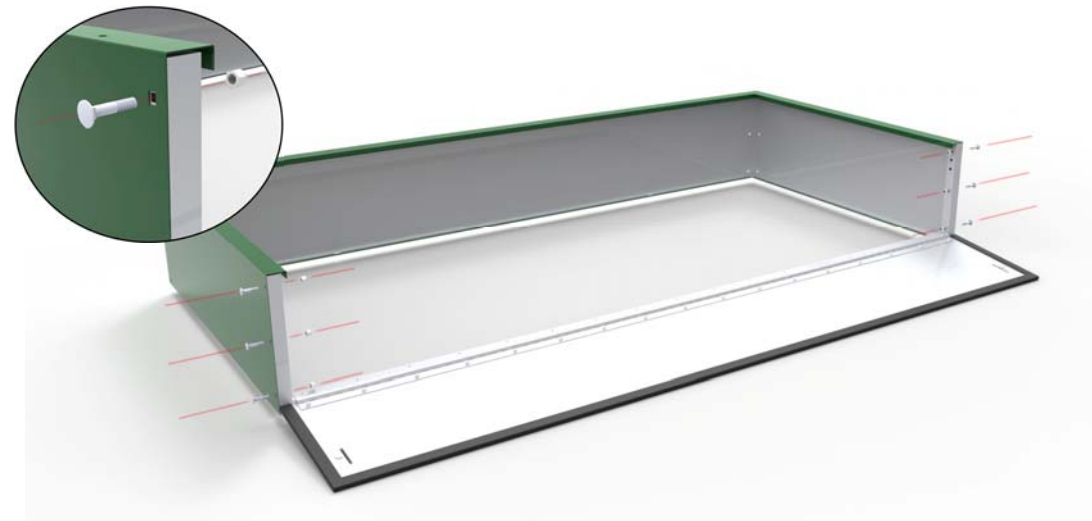


### Step 2

Using 6x M5 x 30mm Coach Bolt and M5 Nyloc Nut. Secure the frame in position as shown above. Tighten all fasteners.

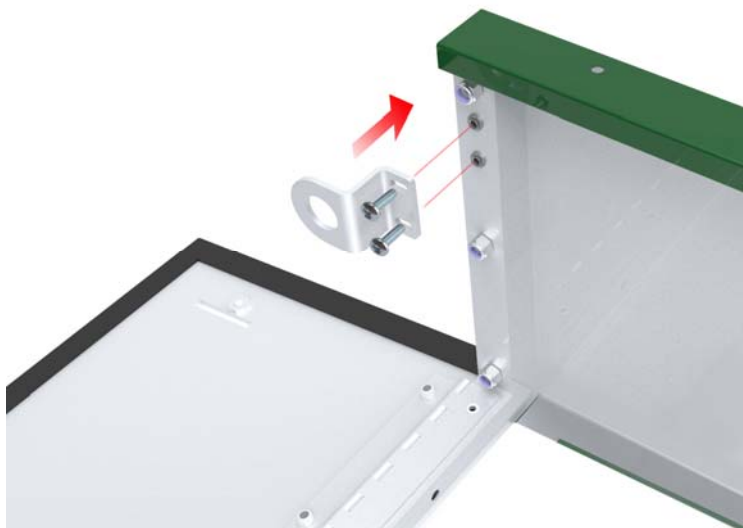

### Step 3

Fit 2 lock brackets to inside of fold down frame as shown above using 2x M5 X 8mm Pan Head Bolt. Adjust lock brackets to ensure magnets secure the fold down plate in the upright position.

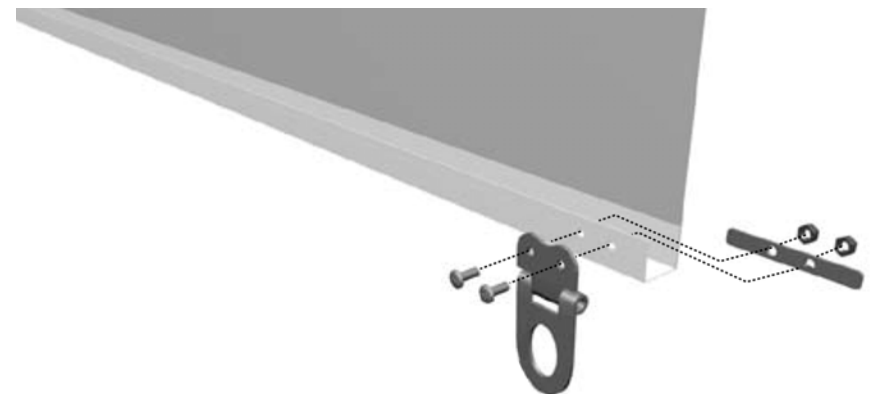

### Step 4

1. Ensure the unit is completely finished, in its final position, flat and level.
2. Hold the hasp against the bottom section of the door (on the inside) and ensure the hasp moves freely over the lock bracket.
3. Keeping the hasp level mark where the two holes are to be drilled. Drill through the section on the back of the door using drill bit supplied – do not drill through the door itself.
4. Secure the hasp in position using the bolts and locknuts provided (make sure you place the back plate in position).